


REMOVAL

1. REMOVE NO. 2 CYLINDER HEAD COVER

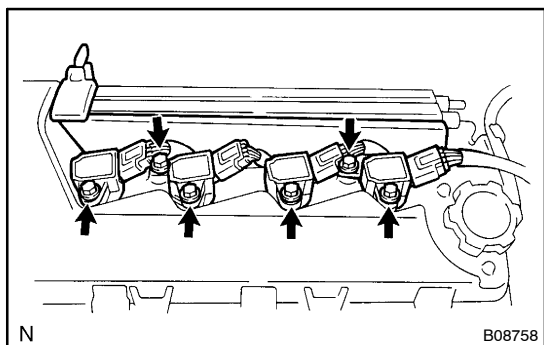

2. REMOVE IGNITION COILS (WITH IGNITER) FROM SPARK PLUGS

- (a) Remove the 2 bolts and disconnect the wire harness protector.
- (b) Disconnect the 4 ignition coil connectors.
- (c) Remove the 4 bolts and pull out the 4 ignition coils (with igniter).

Torque: 9.0 N·m (92 kgf·cm, 79 in.·lbf)