



REMOVAL

1. REMOVE NO. 2 CYLINDER HEAD COVER

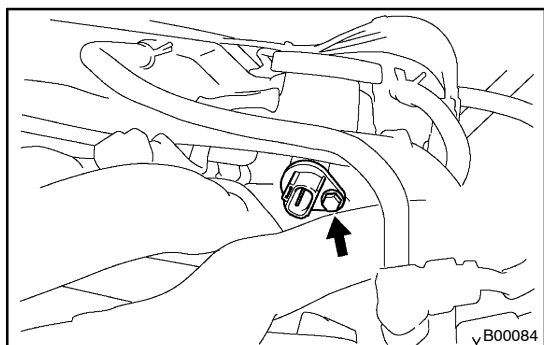

2. 1ZZ-FE: REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the connector.
 - (b) Remove the bolt and camshaft position sensor.
- Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)**

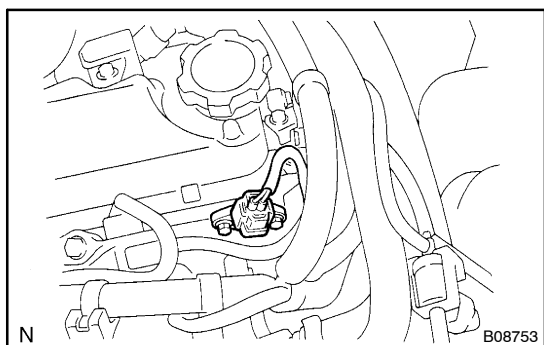

3. 2ZZ-GE: REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the connector.
 - (b) Remove the 2 bolts and camshaft position sensor.
- Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)**