



REMOVAL

1. REMOVE INTAKE MANIFOLD (See page EM-43)
2. REMOVE ENGINE UNDER COVER RH

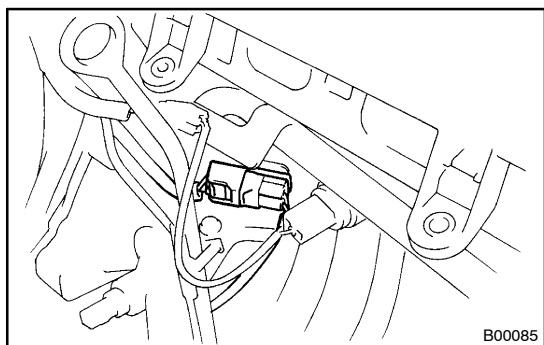

3. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the crankshaft position sensor connector.

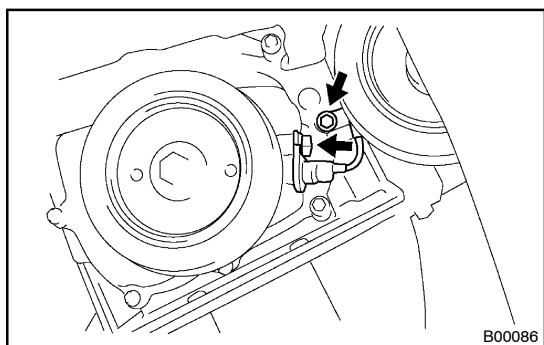

- (b) Remove the 2 bolt and crankshaft position sensor.
Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)