


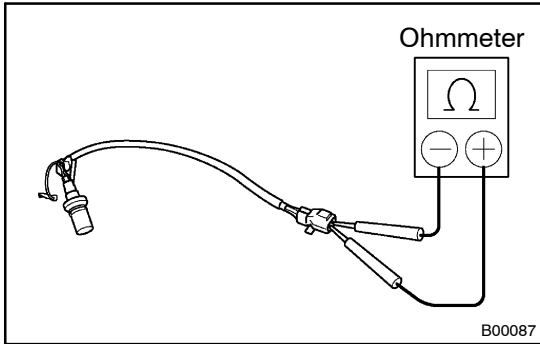

INSPECTION

NOTICE:

"Cold" and "Hot" in these sentences express the temperature of the sensor itself. "Cold" is from -10°C (14°F) to 50°C (122°F) and "Hot" is from 50°C (122°F) to 100°C (212°F).

INSPECT CRANKSHAFT POSITION SENSOR RESISTANCE

Using an ohmmeter, measure the resistance between terminals.

Resistance:

Cold: 1,630 – 2,740 Ω

Hot: 2,065 – 3,225 Ω

If the resistance is not as specified, replace the crankshaft position sensor.