


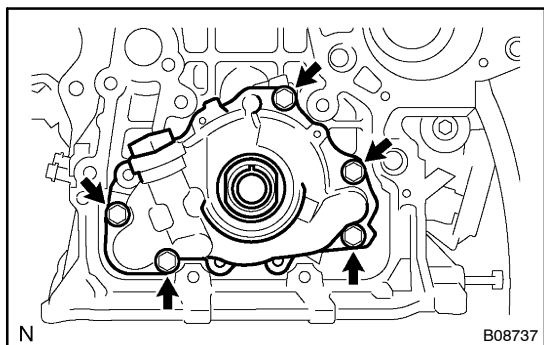

## REMOVAL

1. DRAIN ENGINE OIL
2. REMOVE TIMING CHAIN AND CRANKSHAFT TIMING SPROCKET ([See pages EM-19](#))
3. REMOVE OIL PUMP

Remove the 5 bolts, oil pump and gasket.