


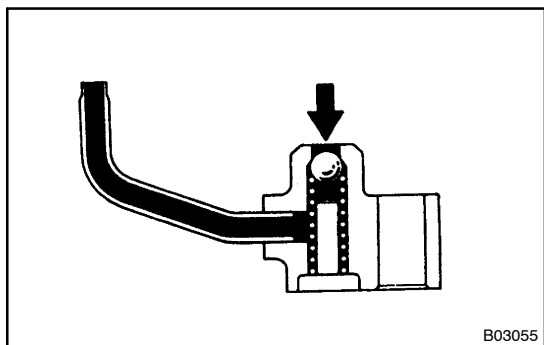

INSPECTION

INSPECT RELIEF VALVE (OIL NOZZLE)

Push the valve with a wooden stick to check if it is stuck.
If stuck, replace the relief valve.