



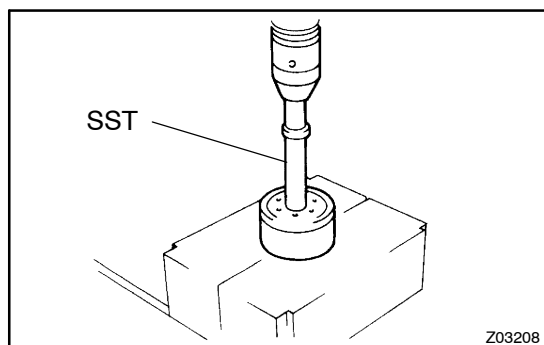


REPLACEMENT

REPLACE CENTER BEARING

- (a) Using SST and press, press out the center bearing.
 SST 09221-25026 (09221-00090)

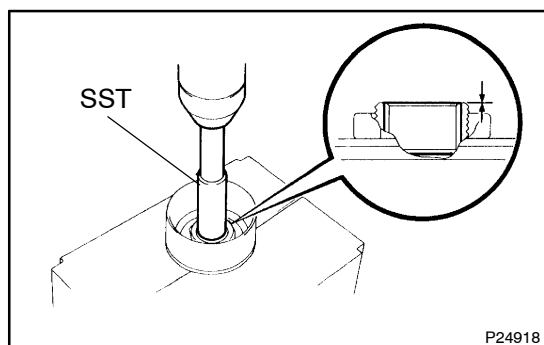

- (b) Using SST and a press, press in a new center bearing to the position shown in the illustration.
 SST 09221-25026 (09221-00071)

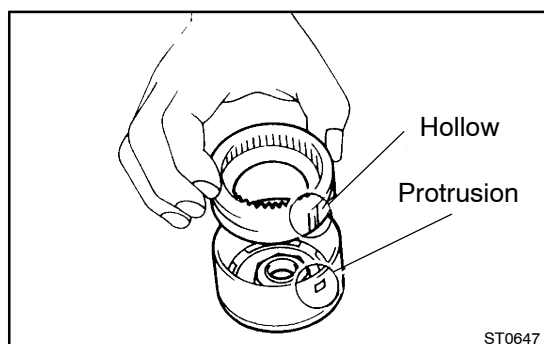

- (c) Align the hollow of the internal gear with the protrusion inside the shock absorber, and remove the internal gear.