


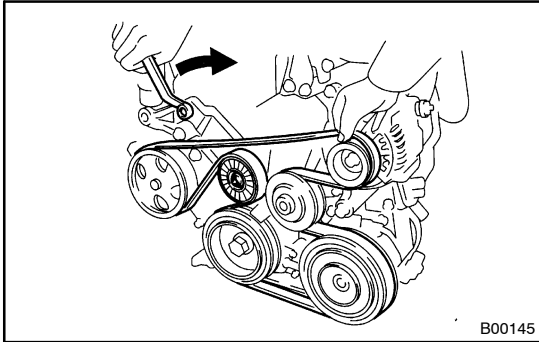

INSTALLATION

1. INSTALL DRIVE BELT

Turning the drive belt tensioner arm clockwise, and install the drive belt.

2. CHECK DRIVE BELT INSTALLING CONDITION