


REMOVAL

1. **REMOVE GLOVE COMPARTMENT PARTS**
(See page BO-80)

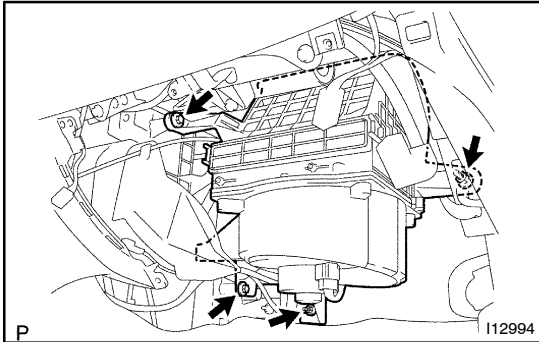

2. **REMOVE BLOWER UNIT**

- (a) Manual A/C:
Disconnect the air inlet control cable.
- (b) Disconnect the connector.
- (c) Remove wire harness clamp.
- (d) Remove the 2 screws, 2 nuts and the blower unit.