



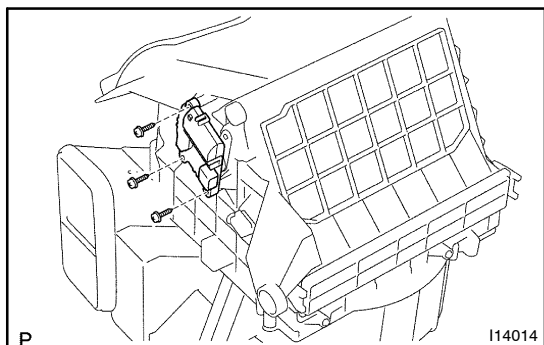

DISASSEMBLY

1. **Auto A/C only:**
REMOVE AIR INLET SERVOMOTOR

Remove the 3 screws and servomotor.

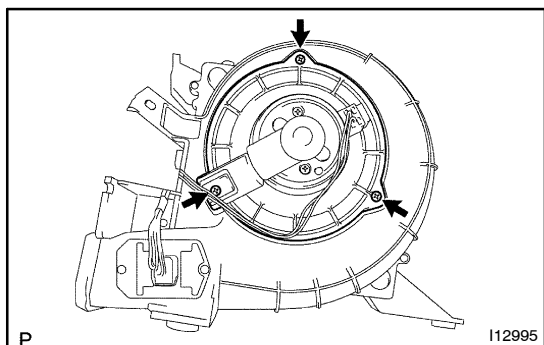

2. **REMOVE BLOWER MOTOR**

Remove the 3 screws and blower motor.

3. **Manual A/C only:**
REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

4. **Auto A/C only:**
REMOVE BLOWER MOTOR LINEAR CONTROLLER

Remove the 2 screws and blower motor linear controller.