


REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. REMOVE DRIVE BELT (See page AC-17)
6. DISCONNECT CRUISE CONTROL ACTUATOR CONNECTOR
7. REMOVE 3 CRUISE CONTROL ACTUATOR SET BOLTS

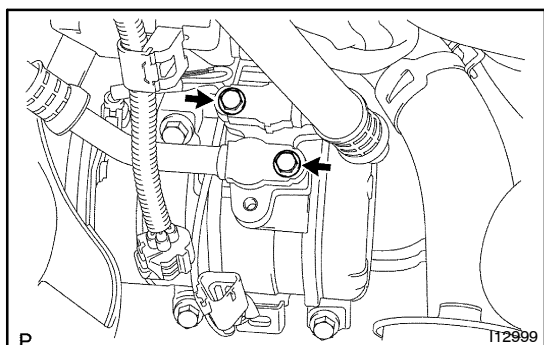


8. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 bolts and disconnect the both hoses.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

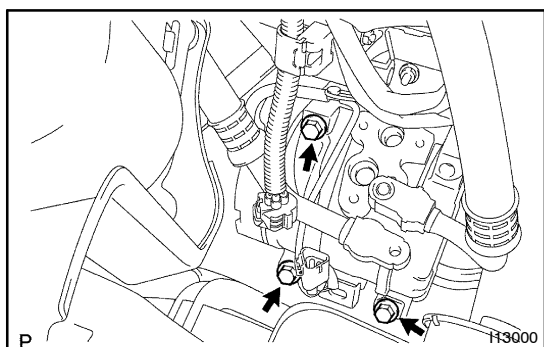

9. REMOVE COMPRESSOR

- (a) Disconnect the connector.
- (b) Disconnect the wire harness clamp.
- (c) Remove the 3 bolts and compressor.