


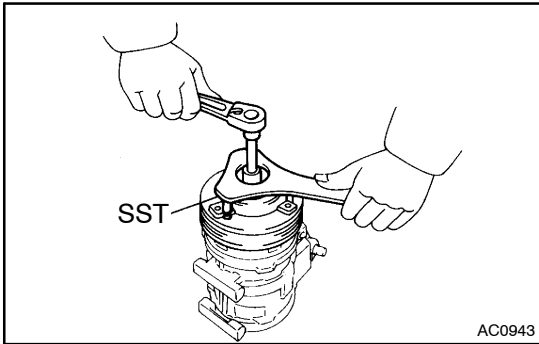


DISASSEMBLY

1. REMOVE PRESSURE PLATE

- (a) Using SST and a socket wrench, remove the shaft bolt.


SST 07112-76060

Torque: 13.2 N·m (135 kgf·cm, 9 ft·lbf)

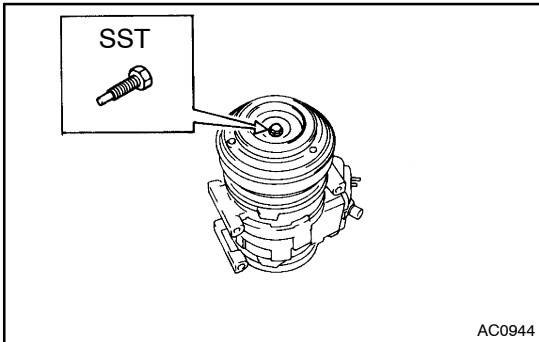


- (b) Install SST on the pressure plate.

SST 07112-66040

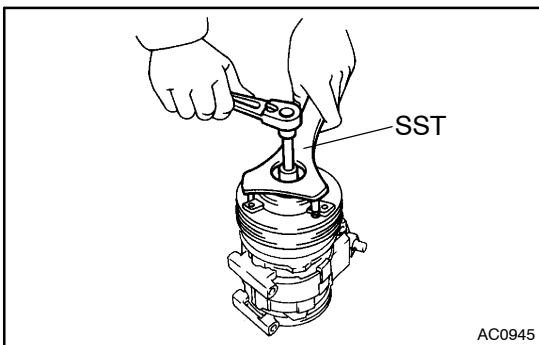


- (c) Using SST and socket wrench, remove the pressure plate.

SST 07112-66040, 07112-76060

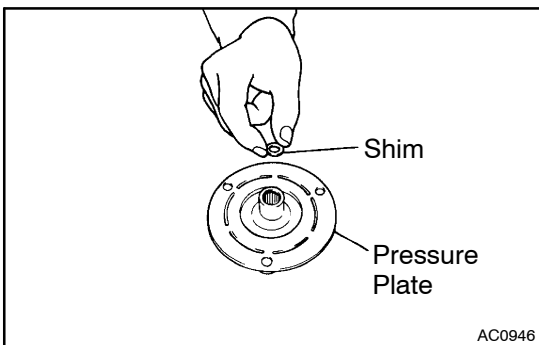


- (d) Remove the shims from the pressure plate.

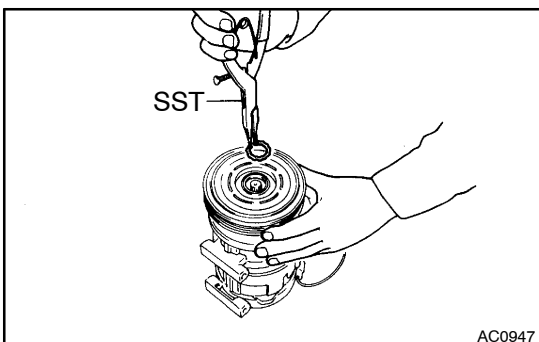

2. REMOVE ROTOR

- (a) Using SST, remove the snap ring.


SST 07114-84020

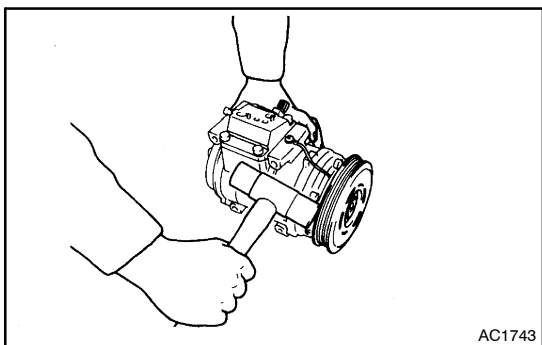

(b) Using a plastic hammer, tap the rotor off the shaft.


NOTICE:

Be careful not to damage the pulley when tapping on the rotor.

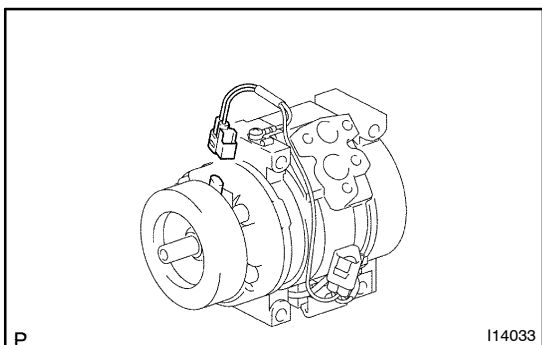


3. REMOVE STATOR

(a) Disconnect the connector from the stator.

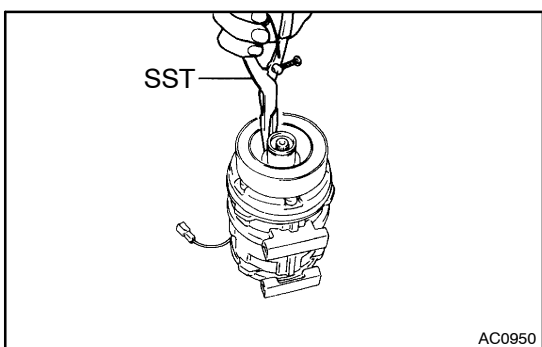

(b) Using SST, remove the snap ring.

SST 07114-84020

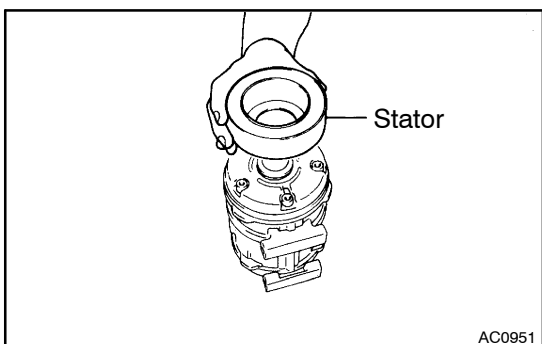

(c) Remove the stator.