

INSTALLATION

1. INSTALL COMPRESSOR

- (a) Install the compressor with 3 bolts.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

- (b) Connect the connector.

2. CONNECT DISCHARGE AND SUCTION HOSES

- (a) Lubricate 2 new O-rings with compressor oil and install them to the hoses.

- (b) Connect the both hoses with 2 bolts.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Hose should be connected immediately after the caps have been removed.

3. INSTALL 3 CRUISE CONTROL ACTUATOR SET BOLTS

4. CONNECT CRUISE CONTROL ACTUATOR CONNECTOR

5. INSTALL AND CHECK DRIVE BELT

(See page AC-16, AC-18)

6. CONNECT NEGATIVE (–) TERMINAL CABLE TO BATTERY

7. EVACUATE AIR FROM REFRIGERATION SYSTEM CHARGE SYSTEM WITH REFRIGERANT

Specified amount: 430 ± 30 g (15.17 ± 1.06 oz.)

8. INSPECT FOR LEAKAGE OF REFRIGERANT

Using a gas leak detector, check for leakage of refrigerant.

If there is leakage, check the tightening torque at the joints.

9. INSPECT A/C OPERATION