

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:


At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 430 ± 30 g (15.17 ± 1.06 oz.)

2. REMOVE FRONT BUMPER (See page BO-4)

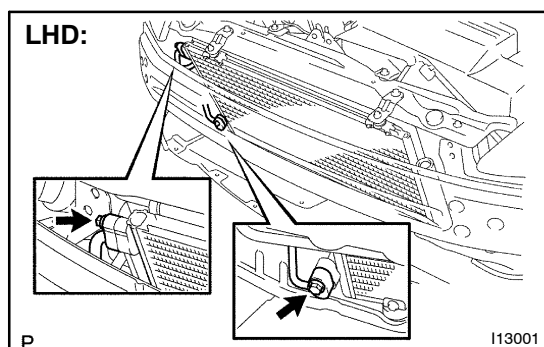

3. REMOVE LIQUID TUBE AND DISCHARGE HOSE

Remove 2 bolts and both tubes.



Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture out of the system.


HINT:

Lubricate 2 new O-rings with compressor oil and install them to the tubes.

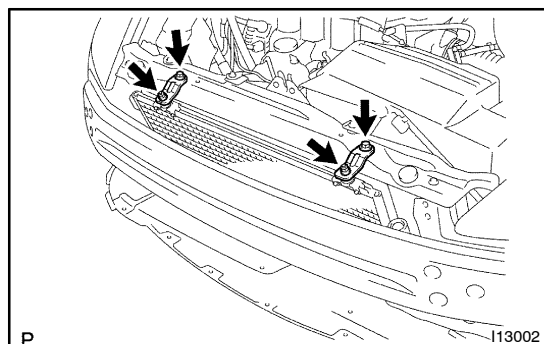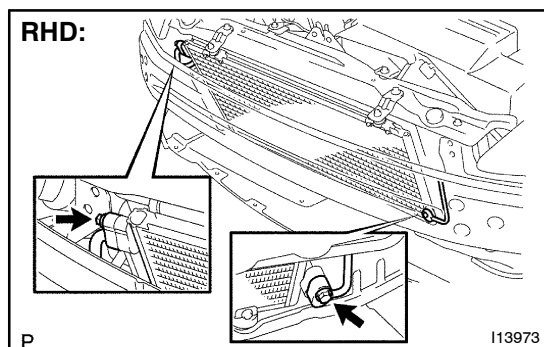

4. REMOVE RADIATOR UPPER MOUNTINGS

Remove the 2 bolts, 2 nuts and the 2 upper mountings.

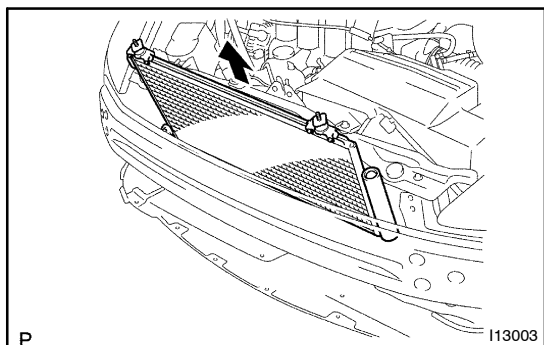**5. REMOVE CONDENSER**

Pull out the condenser.

HINT:

At the time of installation, please refer to the following item.
If condenser was replaced, add compressor oil to the compressor.

Add: 40 cc (1.4 fl. oz.)

Compressor oil: ND-OIL 8 or equivalent