


BLOWER MOTOR INSPECTION

AC21Y-01


1. REMOVE GLOVE COMPARTMENT PARTS

(See page BO-80)

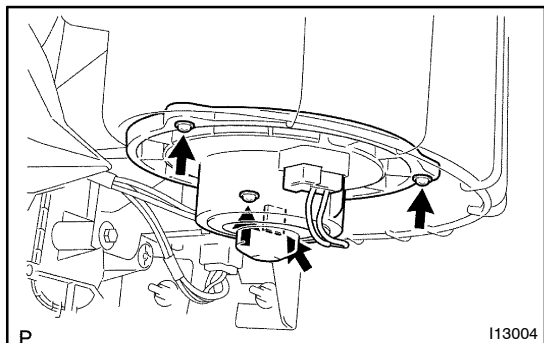

2. REMOVE BLOWER MOTOR

- (a) Remove the wire harness clamp and disconnect the connector.
- (b) Remove the 3 screws and motor.

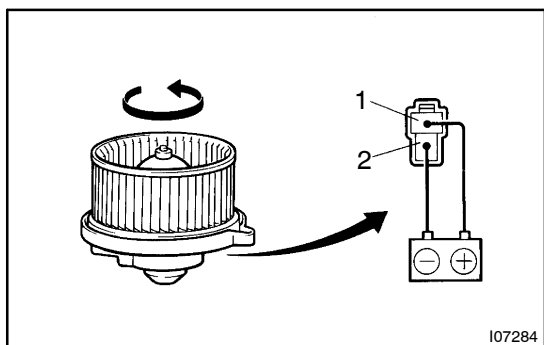

3. INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.

4. INSTALL BLOWER MOTOR

- (a) Install the motor and 3 screws.
- (b) Connect the connector and wire harness clamp.

5. INSTALL GLOVE COMPARTMENT PARTS

(See page BO-86)