



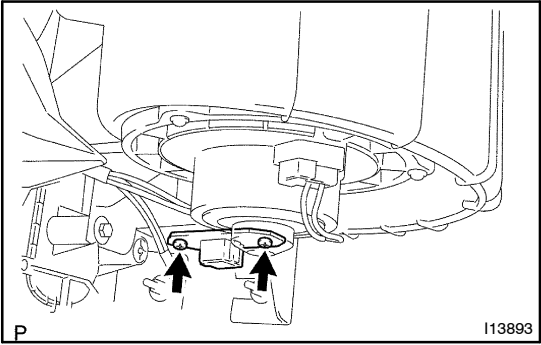

BLOWER RESISTOR INSPECTION

AC2IZ-01

- 1. REMOVE BLOWER RESISTOR**
- (a) Disconnect the connector.
 - (b) Remove the 2 screws and the blower resistor.

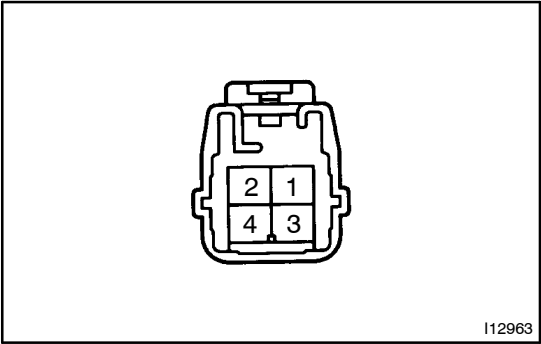

2. INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 – 3 – 4	Continuity

If continuity is not as specified, replace the blower resistor.

- 3. INSTALL BLOWER RESISTOR**
- (a) Install the blower resistor and 2 screws.
 - (b) Connect the connector.