


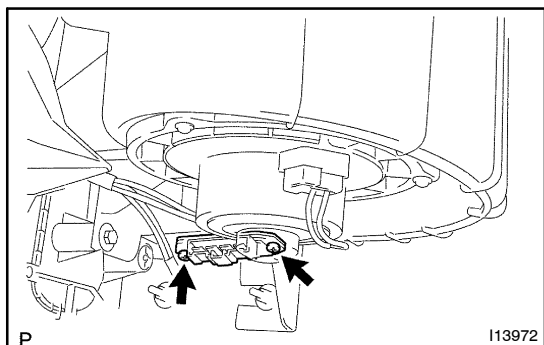

BLOWER MOTOR LINEAR CONTROLLER (Auto A/C) INSPECTION

AC2J0-01

- 1. REMOVE BLOWER MOTOR LINEAR CONTROLLER**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and the controller.
- 2. INSPECT BLOWER MOTOR LINEAR CONTROLLER CONTINUITY ([See page DI-478](#))**
- 3. INSTALL BLOWER MOTOR LINEAR CONTROLLER**
 - (a) Install the controller and 2 screws.
 - (b) Connect the connector.