


AIR MIX SERVOMOTOR (Auto A/C) INSPECTION

AC2JC-01

1. REMOVE INSTRUMENT PANEL ([See page BO-80](#))

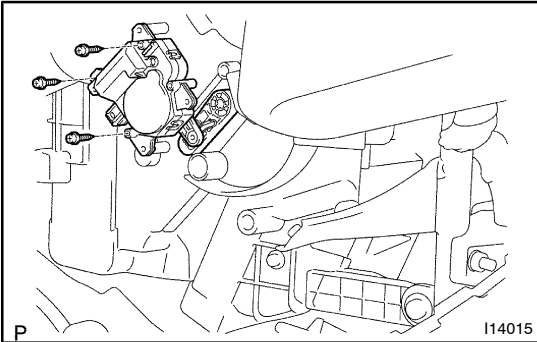

2. REMOVE AIR MIX SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and servomotor.
3. INSPECT AIR MIX CONTROL SERVOMOTOR CIRCUIT ([See page DI-458](#))
4. INSPECT AIR MIX DAMPER POSITION SENSOR CIRCUIT ([See page DI-452](#))
5. INSTALL AIR MIX SERVOMOTOR
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.
6. INSTALL INSTRUMENT PANEL ([See page BO-86](#))