


AIR OUTLET SERVOMOTOR (Auto A/C)

INSPECTION

AC2JD-01

1. REMOVE INSTRUMENT PANEL ([See page BO-80](#))

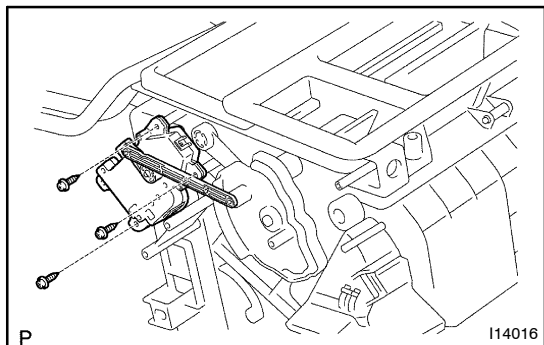

2. REMOVE AIR OUTLET SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) remove the 3 screws and servomotor.
3. INSPECT AIR OUTLET DAMPER POSITION SENSOR CIRCUIT ([See page DI-455](#))
4. INSPECT AIR OUTLET CONTROL SERVOMOTOR CIRCUIT ([See page DI-461](#))
5. INSPECT AIR OUTLET SERVOMOTOR
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.
6. INSTALL INSTRUMENT PANEL ([See page BO-86](#))