


THERMISTOR INSPECTION

1. REMOVE BLOWER UNIT (See page AC-32)

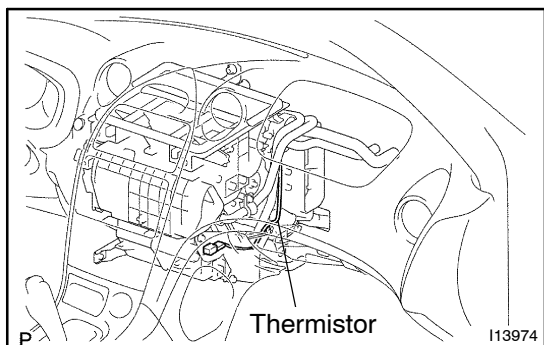


2. REMOVE THERMISTOR

- Disconnect the connector.
- Using a screwdriver, pull out the thermistor.


HINT:

Tape the screwdriver tip before use.

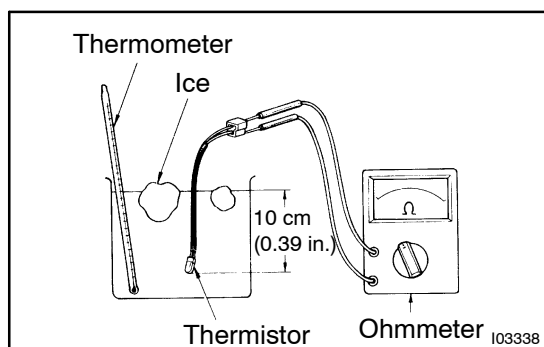

3. INSPECT THERMISTOR

- Place the thermistor in cold water, and while changing the temperature of water, measure resistance at the connector and at the same time, measure temperature of water with a thermometer.

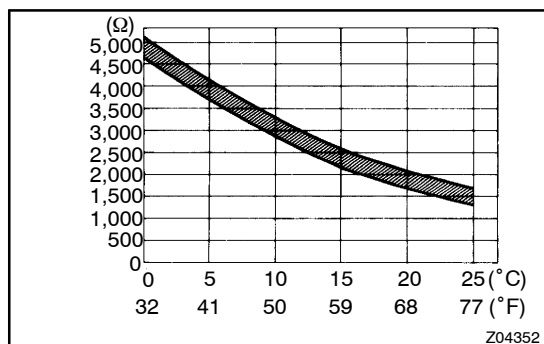

- Compare the 2 readings on the chart. If resistance is not as specified, replace the thermistor.

4. INSTALL THERMISTOR

- Install the thermistor to A/C unit.
- Connect the connector.

5. INSTALL BLOWER UNIT (See page AC-36)