


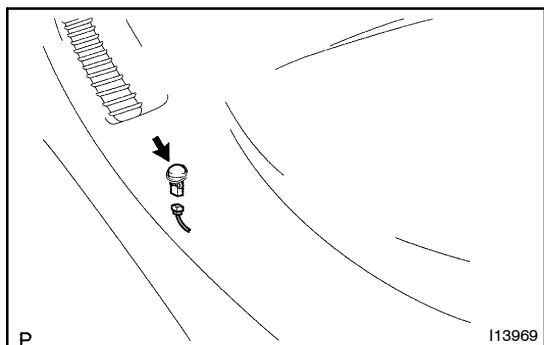

SOLAR SENSOR (Auto A/C) INSPECTION

AC2JE-01

1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the sensor, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

2. INSPECT SOLAR SENSOR CIRCUIT

(See page DI-446)

3. INSTALL SOLAR SENSOR

- (a) Connect the connector.
- (b) Insert the sensor to the instrument panel.