


ROOM TEMPERATURE SENSOR (Auto A/C) INSPECTION

AC2JF-01

1. REMOVE LOWER FINISH PANEL NO. 1
2. REMOVE FINISH PANEL
3. REMOVE FINISH PANEL END

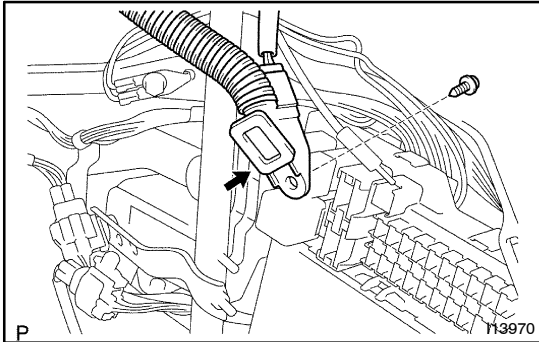

4. REMOVE ROOM TEMPERATURE SENSOR
 - (a) Disconnect the connector and aspirator hose.
 - (b) Remove a screw and the sensor.
5. INSPECT ROOM TEMPERATURE SENSOR CIRCUIT
(See page DI-434)
6. INSTALL ROOM TEMPERATURE SENSOR
 - (a) Install the sensor and a screw.
 - (b) Connect the connector and aspirator hose.
7. INSTALL FINISH PANEL END
8. INSTALL FINISH PANEL
9. INSTALL LOWER FINISH PANEL NO. 1