


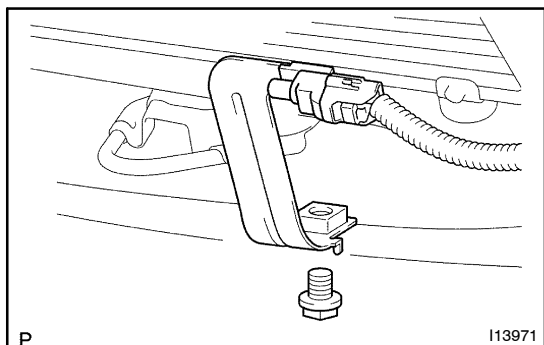

AMBIENT TEMPERATURE SENSOR (Auto A/C) INSPECTION

AC2JG-01

- 1. REMOVE AMBIENT TEMPERATURE SENSOR**
 - (a) Remove the bolt and disconnect the connector.
 - (b) Using a clip remover, pull out the sensor from front bumper reinforcement.
- 2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page DI-437)**
- 3. INSTALL AMBIENT TEMPERATURE SENSOR**
 - (a) Install the sensor and bolt.
 - (b) Connect the connector.