



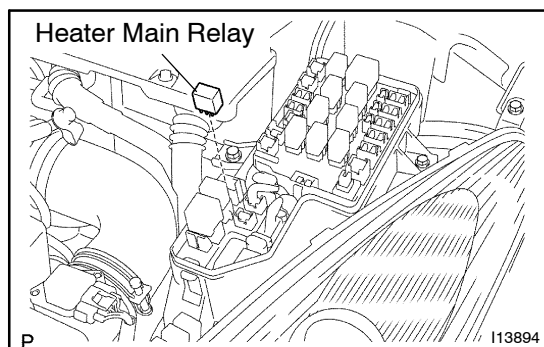

HEATER MAIN RELAY INSPECTION

AC2J5-01

1. REMOVE HEATER MAIN RELAY FROM ENGINE ROOM RELAY BLOCK NO. 1

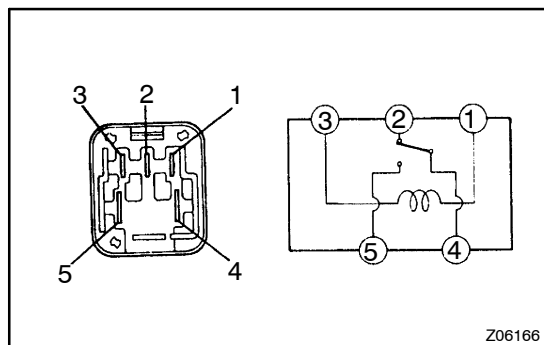

2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 3 2 - 4	Continuity
Apply B+ between terminals 1 and 3.	4 - 5	Continuity

If continuity is not as specified, replace the relay.