



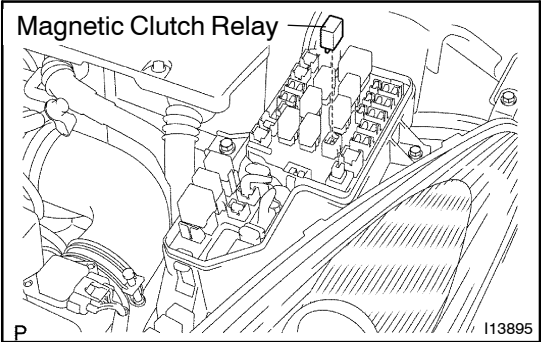

MAGNETIC CLUTCH RELAY INSPECTION

AC2J6-01

1. REMOVE MAGNETIC CLUTCH RELAY FROM ENGINE ROOM J/B

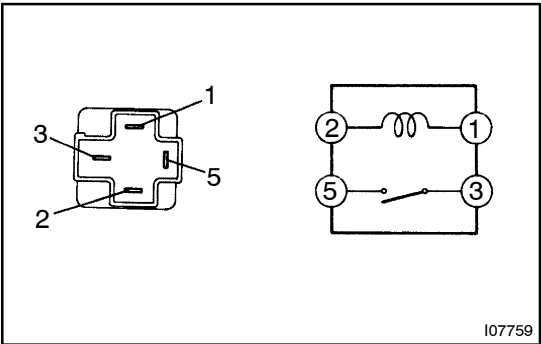

2. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.