



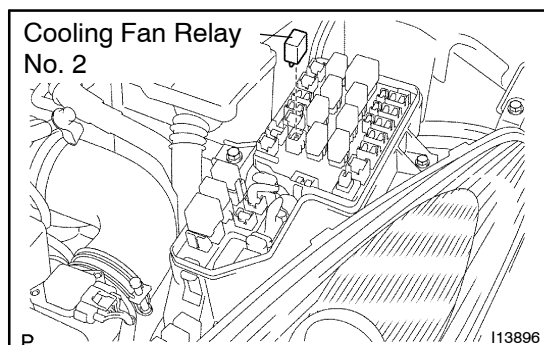


COOLING FAN RELAY INSPECTION

AC2J7-01

1. REMOVE COOLING FAN RELAY NO. 2 FROM ENGINE ROOM J/B

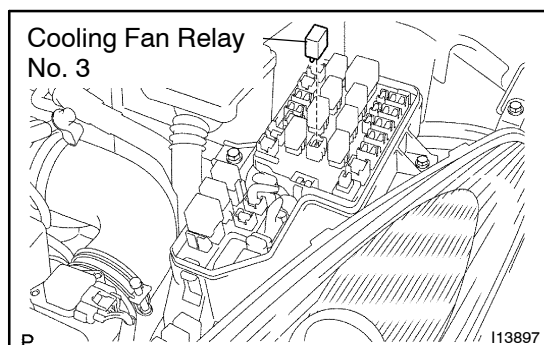


2. REMOVE COOLING FAN RELAY NO. 3 FROM ENGINE ROOM J/B

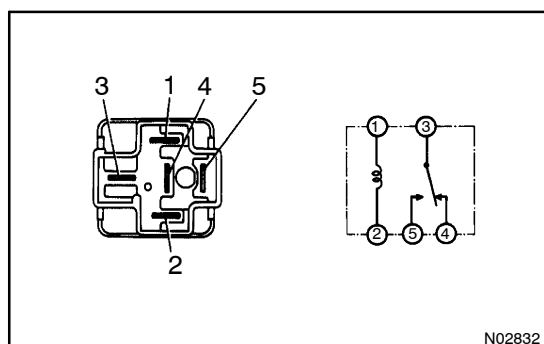

3. INSPECT COOLING FAN RELAY NO. 2 CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2 4 - 5	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

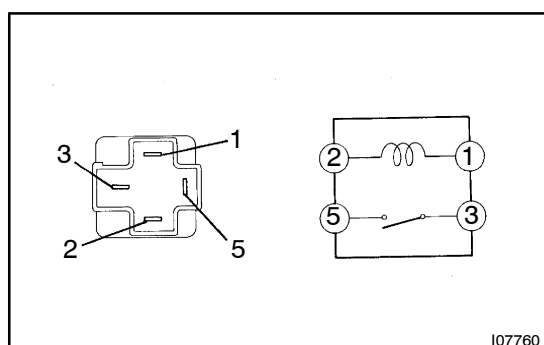

4. INSPECT COOLING FAN RELAY NO. 3 CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.