



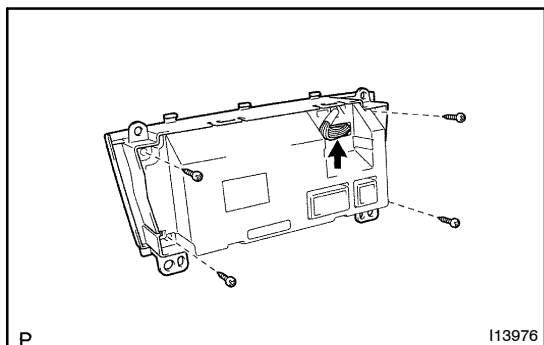

DISASSEMBLY


1. REMOVE A/C CONTROL HOUSING

- (a) Disconnect the connector.
- (b) Remove the 4 screws and A/C control housing.

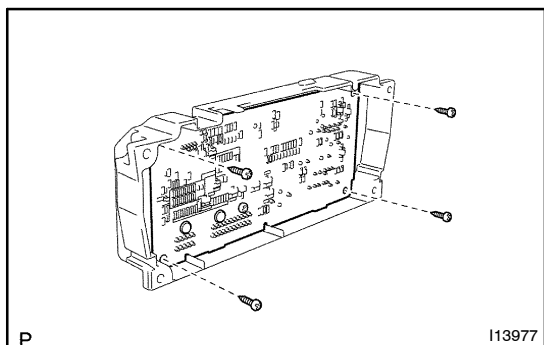

2. REMOVE A/C AMPLIFIER

Remove the 4 screws and A/C amplifier.

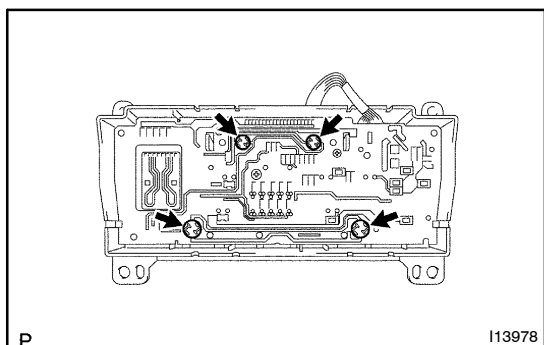

3. REMOVE BULB

Using a screwdriver, turn the bulb to the left and pull out the bulb.