


INSPECTION

1. INSPECT PANEL LIGHTING

- (a) Connect the positive (+) lead from the battery to terminal A-20 and the negative (-) lead to terminal A-24, then check that the illumination lights up.

If there is bulb not light up, replace the bulb only.

If both bulbs do not light up, proceed to the following step.

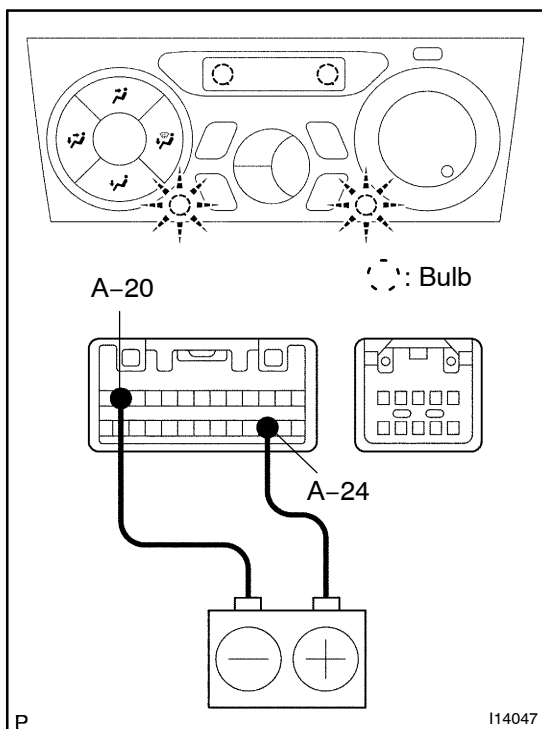


- (b) Connect the positive (+) lead from the battery to terminal C-6, and the negative (-) lead to terminal C-5, then check that the illumination lights up.


If there is bulb not light up, replace the bulb only.

If the 2 bulbs do not light up, try replace the bulb with a new one.

If the bulbs do not light up, replace the A/C control panel.

If the bulbs light up, replace the A/C amplifier.

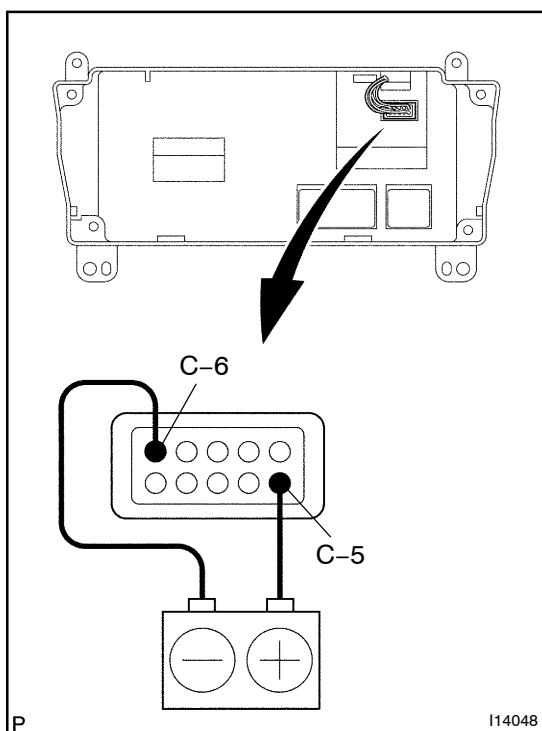

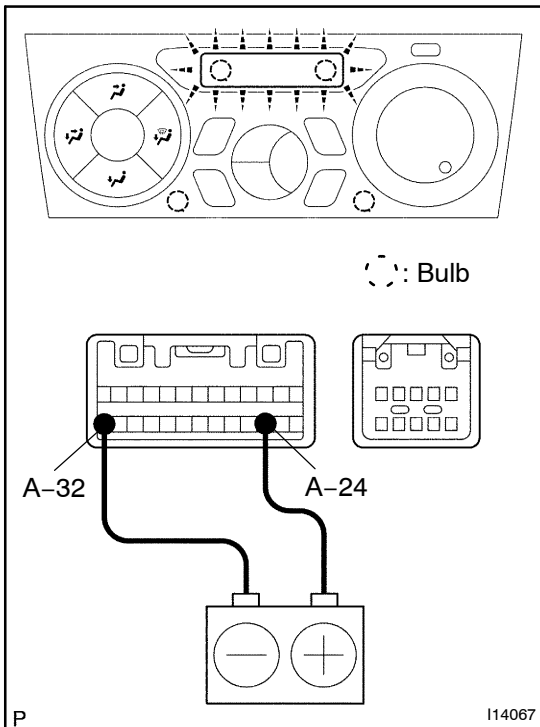

2. INSPECT LCD LIGHTING

Connect the positive (+) lead from the battery to terminal A-32 and the negative (-) lead to terminal A-24, then check that the illumination lights up.

If there is bulb not light up, replace the bulb only.

If characters appear on the liquid crystal display but the back light does not light up, replace the A/C control panel.

3. INSPECT A/C CONTROL ASSEMBLY CIRCUIT (See page DI-430)