

REMOVAL

1. REMOVE COMBINATION METER ([See page BE-50](#))
2. REMOVE ENGINE ECU