

REMOVAL



1. REMOVE CENTER CLUSTER FINISH PANEL

(See page BO-80)

2. DISCONNECT HEATER CONTROL CABLES


NOTICE:

When the air mix damper control cables is disconnected, should not bend the cable.

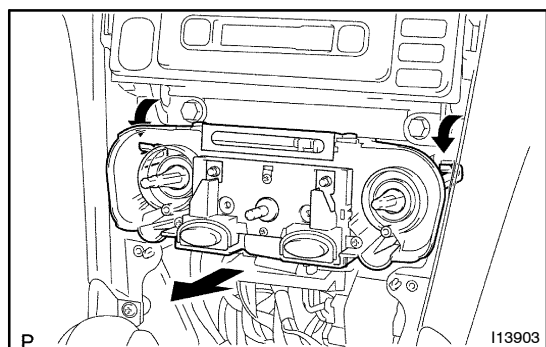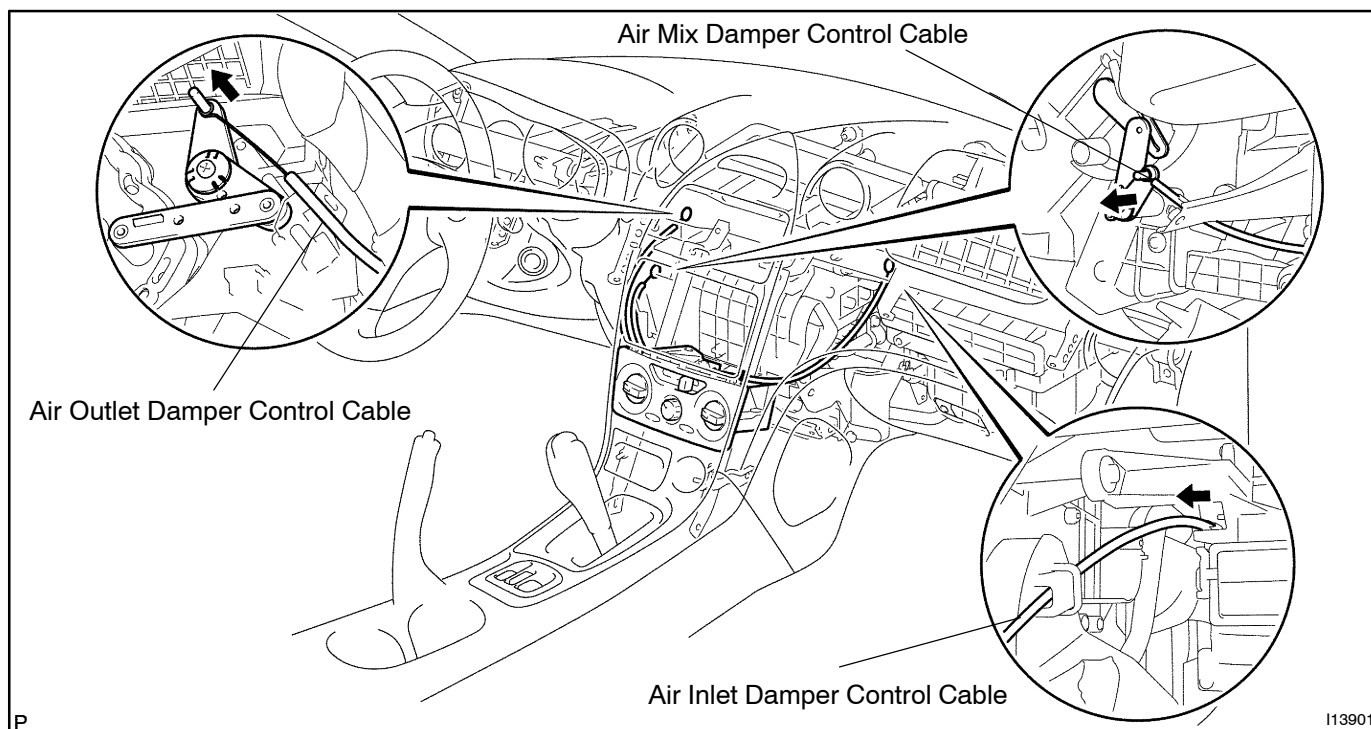

3. REMOVE HEATER CONTROL ASSEMBLY

Release the 2 claws and pull out the A/C control assembly, then disconnect the connector.

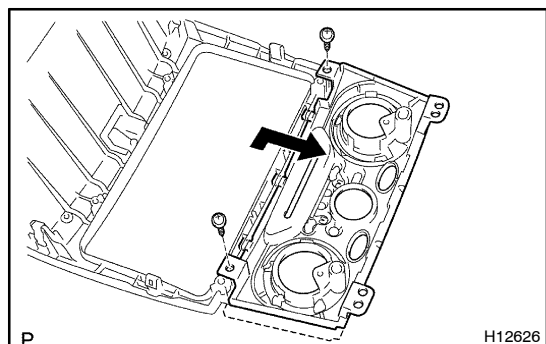

4. REMOVE HEATER CONTROL PANEL

- (a) Remove the 2 screws.
- (b) Slide and remove the A/C control assembly.