


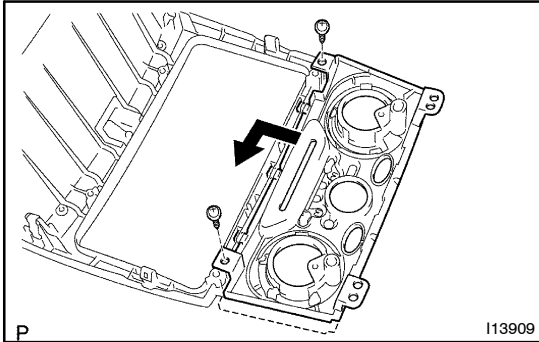



INSTALLATION

1. INSTALL A/C CONTROL PANEL

Install the A/C control panel and 2 screws.

2. INSTALL A/C CONTROL ASSEMBLY


- Install the A/C control assembly temporarily.
- Pass through the A/C control cables as shown in the illustration.

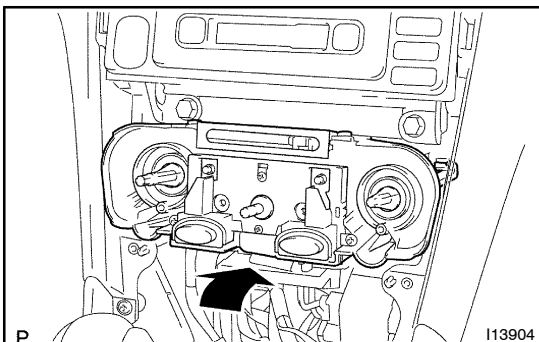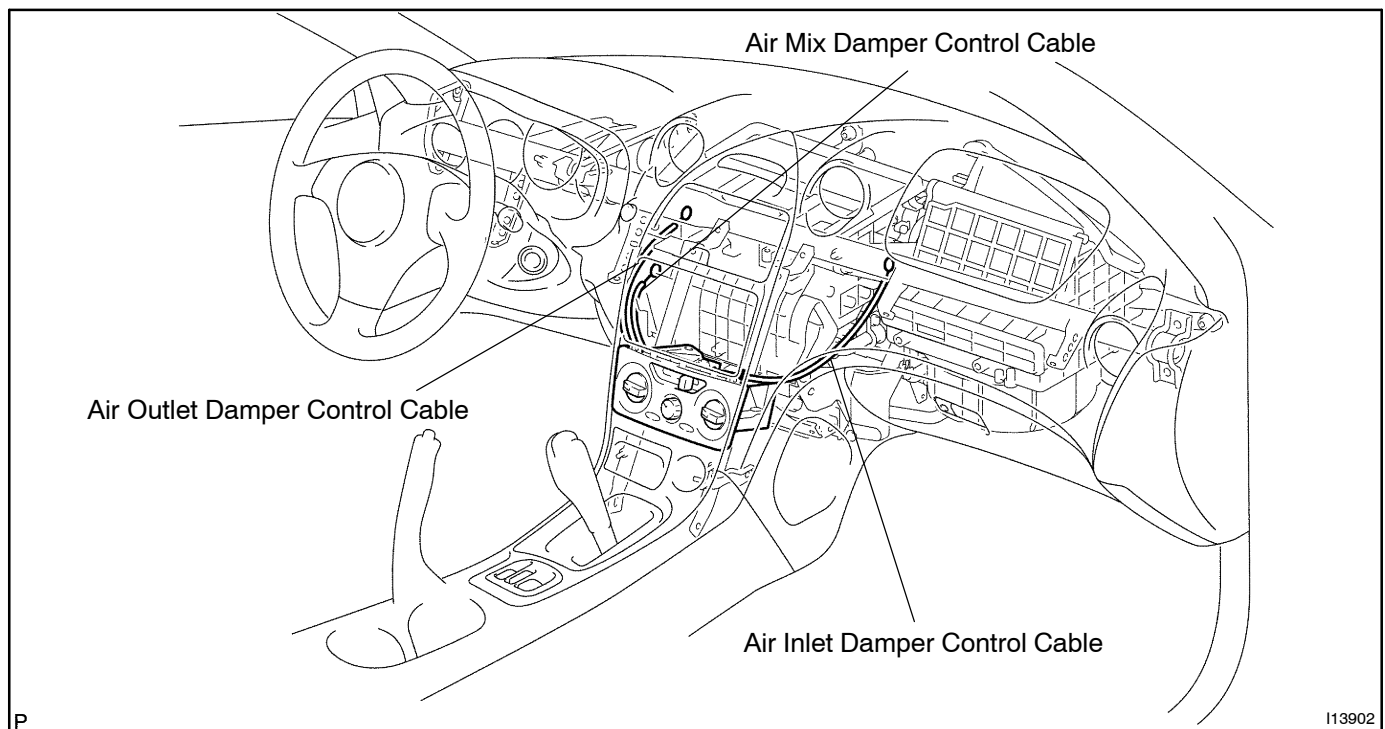

- Fit the 2 claws of heater control assembly in the instrument panel hole.

3. LHD models:**CONNECT A/C CONTROL CABLES**

- (a) Set air inlet control lever to "RECIRC" position.
- (b) Set temperature control dial to "MAX. COOL" position.
- (c) Set mode control dial to "DEF" position.

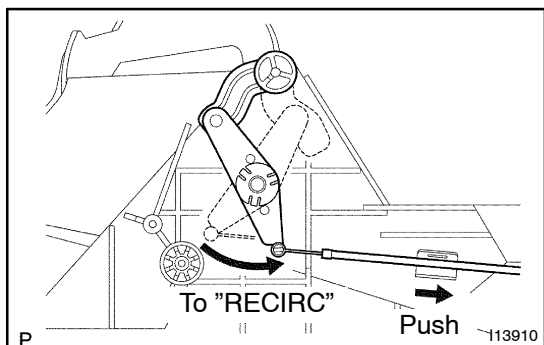


- (d) Adjust air inlet damper control cable.

Set air inlet damper control lever to "RECIRC" position and connect the inner cable to lever pin and clamp the outer cable.

HINT:

Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

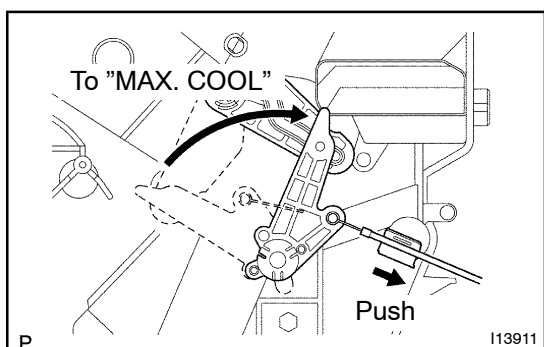


- (e) Adjust air mix damper control cable.

Set air mix damper control lever to "MAX. COOL" position and connect the inner cable to lever pin and clamp the outer cable.

HINT:

Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

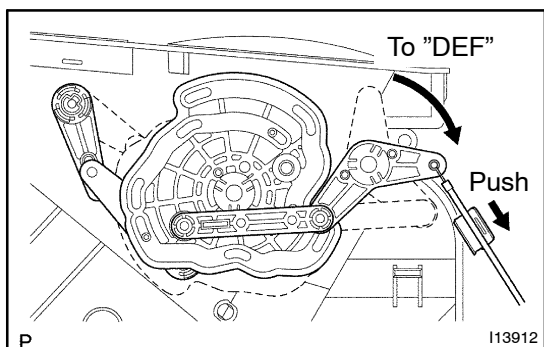

- (f) Adjust air outlet damper control cable.


Pull the air outlet damper control link to "DEF" position, connect the control cable and lock the clamp.

HINT:

Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

4. RHD models:**CONNECT A/C CONTROL CABLES**


- (a) Set air inlet control lever to "FRESH" position.
- (b) Set temperature control dial to "MAX. COOL" position.
- (c) Set mode control dial to "FACE" position.

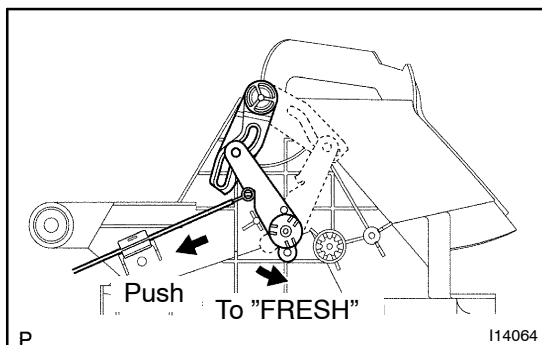

- (d) Adjust air inlet damper control cable.
Set air inlet damper control lever to "FRESH" position and connect the inner cable to lever pin and clamp the outer cable.

HINT:


Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

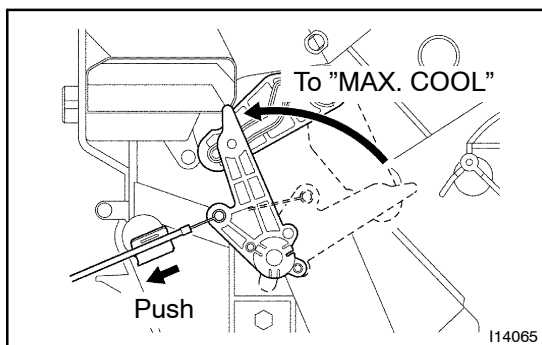

- (e) Adjust air mix damper control cable.
Set air mix damper control lever to "MAX. COOL" position and connect the inner cable to lever pin and clamp the outer cable.

HINT:

Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.

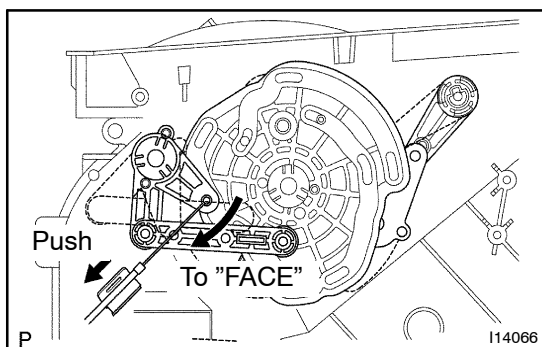

- (f) Adjust air outlet damper control cable.
Pull the air outlet damper control link to "FACE" position, connect the control cable and lock the clamp.

HINT:

Lock the clamp while lightly pushing the outer cable to the direction shown by arrow in the illustration.