


WATER TEMPERATURE SWITCH INSPECTION

AC2JA-01


1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

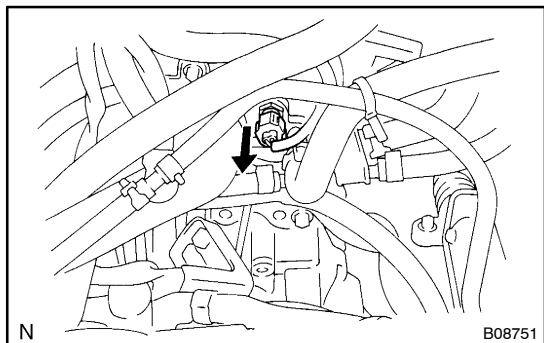

2. REMOVE WATER TEMPERATURE SWITCH

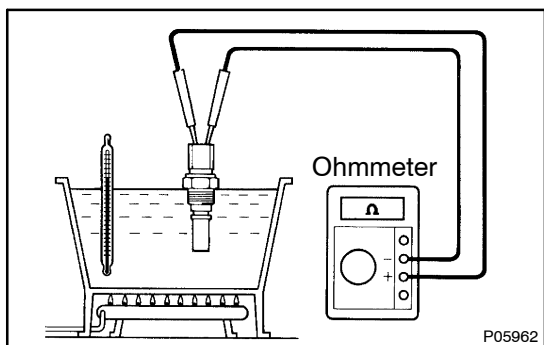

3. INSPECT SWITCH CONTINUITY

- (a) Using an ohmmeter, check that no continuity exists between the terminals when the coolant temperature is above 90 °C (194 °F).
- (b) Using an ohmmeter, check that continuity exists between the terminals when the coolant temperature is below 83 °C (181 °F).

If no continuity exists, replace the switch.

4. INSTALL WATER TEMPERATURE SWITCH

5. REFILL ENGINE COOLANT