
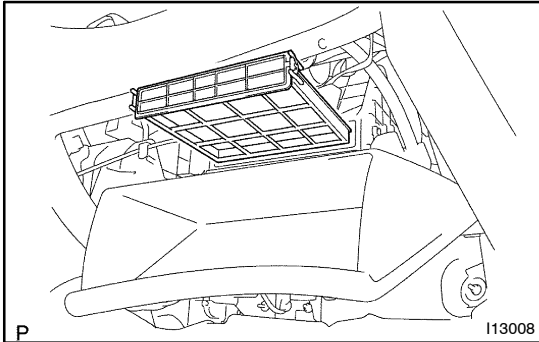


AIR REFINER FILTER REPLACEMENT

1. REMOVE AIR REFINER FILTER

- (a) Remove the 2 pins in the glove box and open the glove box widely by pulling it down.
- (b) Pull out the filter case.
- (c) Remove the air refiner filter from the filter case.

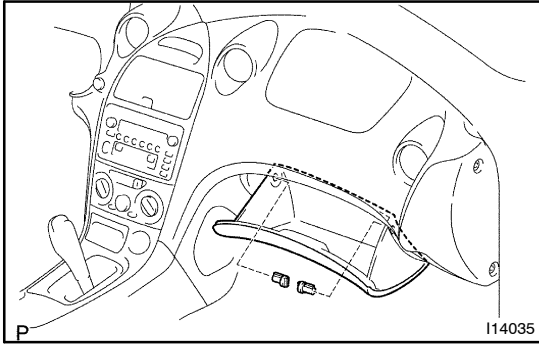

2. INSTALL AIR REFINER FILTER

- (a) Install the air refiner filter to filter case.
- (b) Install the filter case.
- (c) Close the glove box and install the 2 pins to it.