



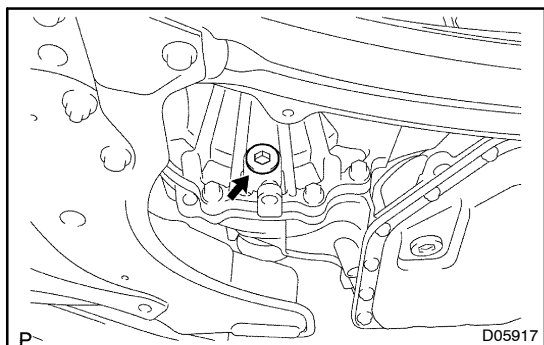

DIFFERENTIAL OIL SEAL ON-VEHICLE REPAIR


1. DRAIN ATF FROM FRONT DIFFERENTIAL CASE
2. REMOVE LH AND RH DRIVE SHAFTS
(See page SA-19)

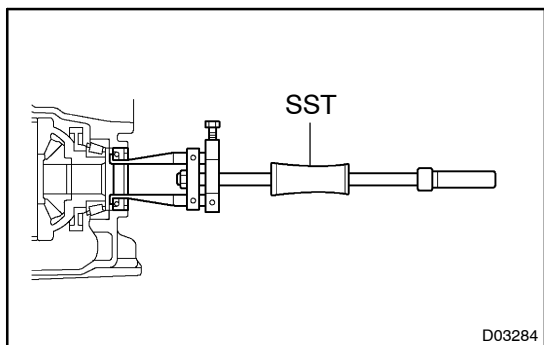

3. REMOVE LH AND RH SIDE OIL SEAL

Using SST, drive out both the side oil seals.

SST 09308-10010

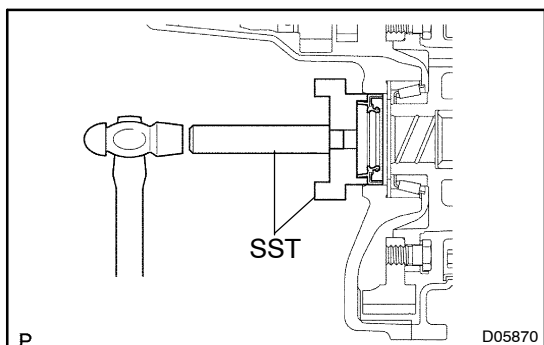


4. INSTALL LH SIDE OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.

SST 09350-32014 (09351-32150), 09950-70010
(09951-07150)

Oil seal drive in depth: 2.7 ± 0.5 mm (0.106 ± 0.020 in.)

- (b) Coat the oil seal lip with MP grease.

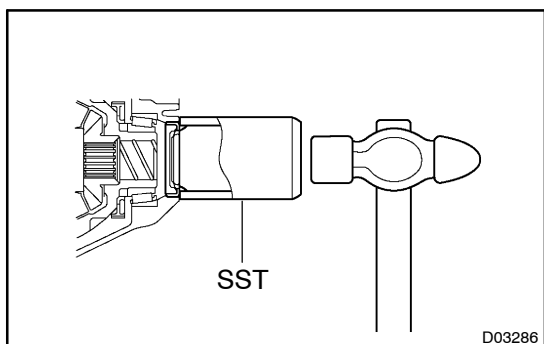

5. INSTALL RH SIDE OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.

SST 09223-00010

Oil seal drive in depth: 0 ± 0.5 mm (0 ± 0.020 in.)

- (b) Coat the oil seal lip with MP grease.

6. INSTALL LH AND RH DRIVE SHAFTS

(See page SA-28)

7. FILL ATF AND CHECK ATF LEVEL

(See page DI-4)