


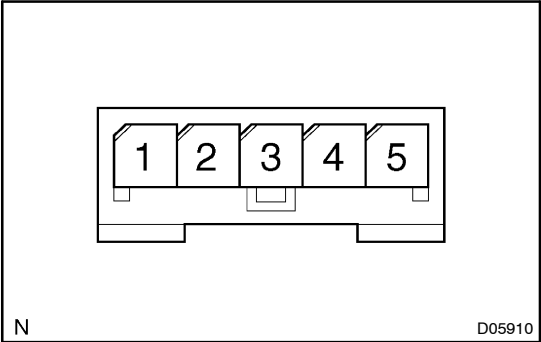

INSPECTION

INSPECT SHIFT LOCK CONTROL UNIT ASSEMBLY

Using a voltmeter, measure the voltage at each terminal.

HINT:

Do not disconnect the shift lock control unit assembly connector.

Terminal	Measuring Condition	Voltage (V)
5 – 1 (IG – E)	Ignition switch ON	10 – 14
3 – 1 (STP – E)	Depressing brake pedal	10 – 14