



REMOVAL

1. REMOVE INSTRUMENT PANEL (See page BO-80)
2. REMOVE A/C UNIT (See page AC-26)

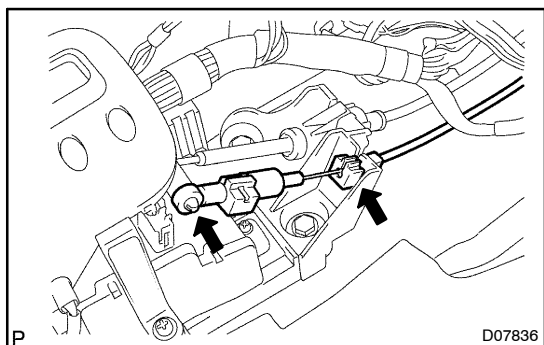


3. REMOVE KEY INTERLOCK CABLE

- (a) Remove the cable end from the rod of the floor shift assembly.
- (b) Pull out the cable while pressing the clip of the key interlock cable.

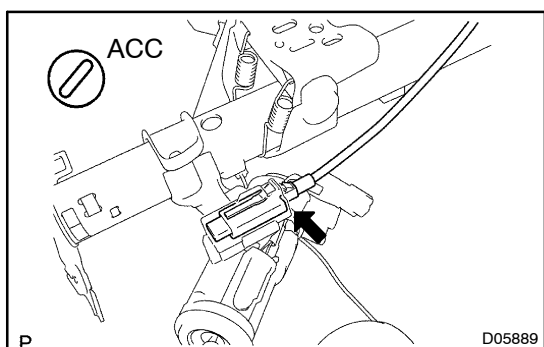


- (c) With the key in ACC, remove the cable cap claw from the key interlock and pull it.

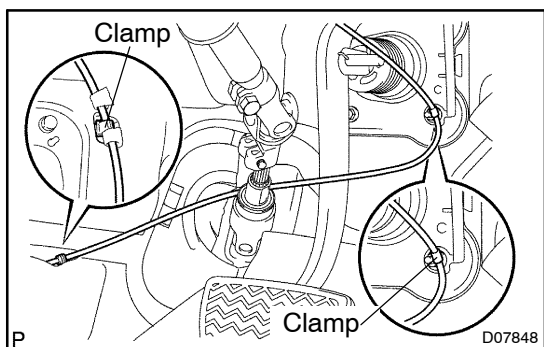


- (d) Disconnect the 2 key interlock cable clamps.

4. REMOVE FLOOR SHIFT ASSEMBLY

- (a) Disconnect the 2 connectors.
- (b) Disconnect the 2 wire harness clamps from the floor shift assembly.

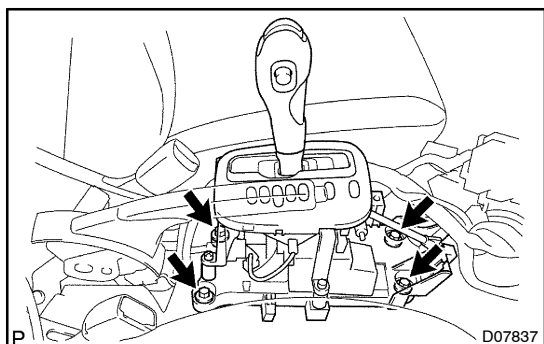

- (c) Remove the 4 bolts from the floor shift assembly.

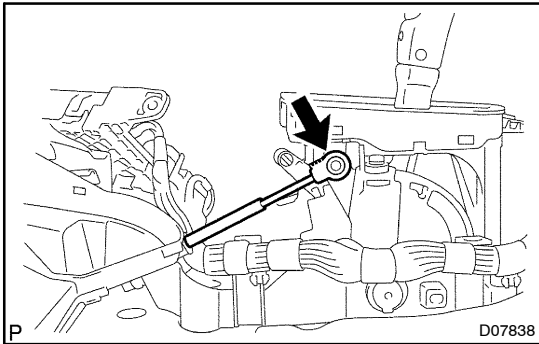

- (d) Remove the cable end from the rod of the floor shift assembly.
- (e) Pull out the cable while pressing the clip of the transaxle control cable.
- (f) Remove the floor shift assembly.