


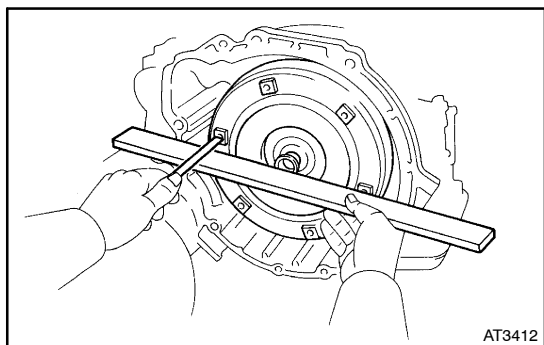

INSTALLATION

1. CHECK TORQUE CONVERTER INSTALLATION

Using calipers and a straight edge, measure the distance between the installed surface and the front surface of the transaxle housing.

Correct distance: More than 13.3 mm (0.524 in.)

2. TRANSAXLE INSTALLATION

Installation is in the reverse order of removal ([See page AX-31](#)).

HINT:

- After installation, adjust the shift control cable and neutral start switch ([See page DI-4](#)).
- Fill ATF and check the fluid level ([See page DI-4](#)).
- Perform the test drive of the vehicle.
- Adjust the hood ([See page BO-9](#)).