
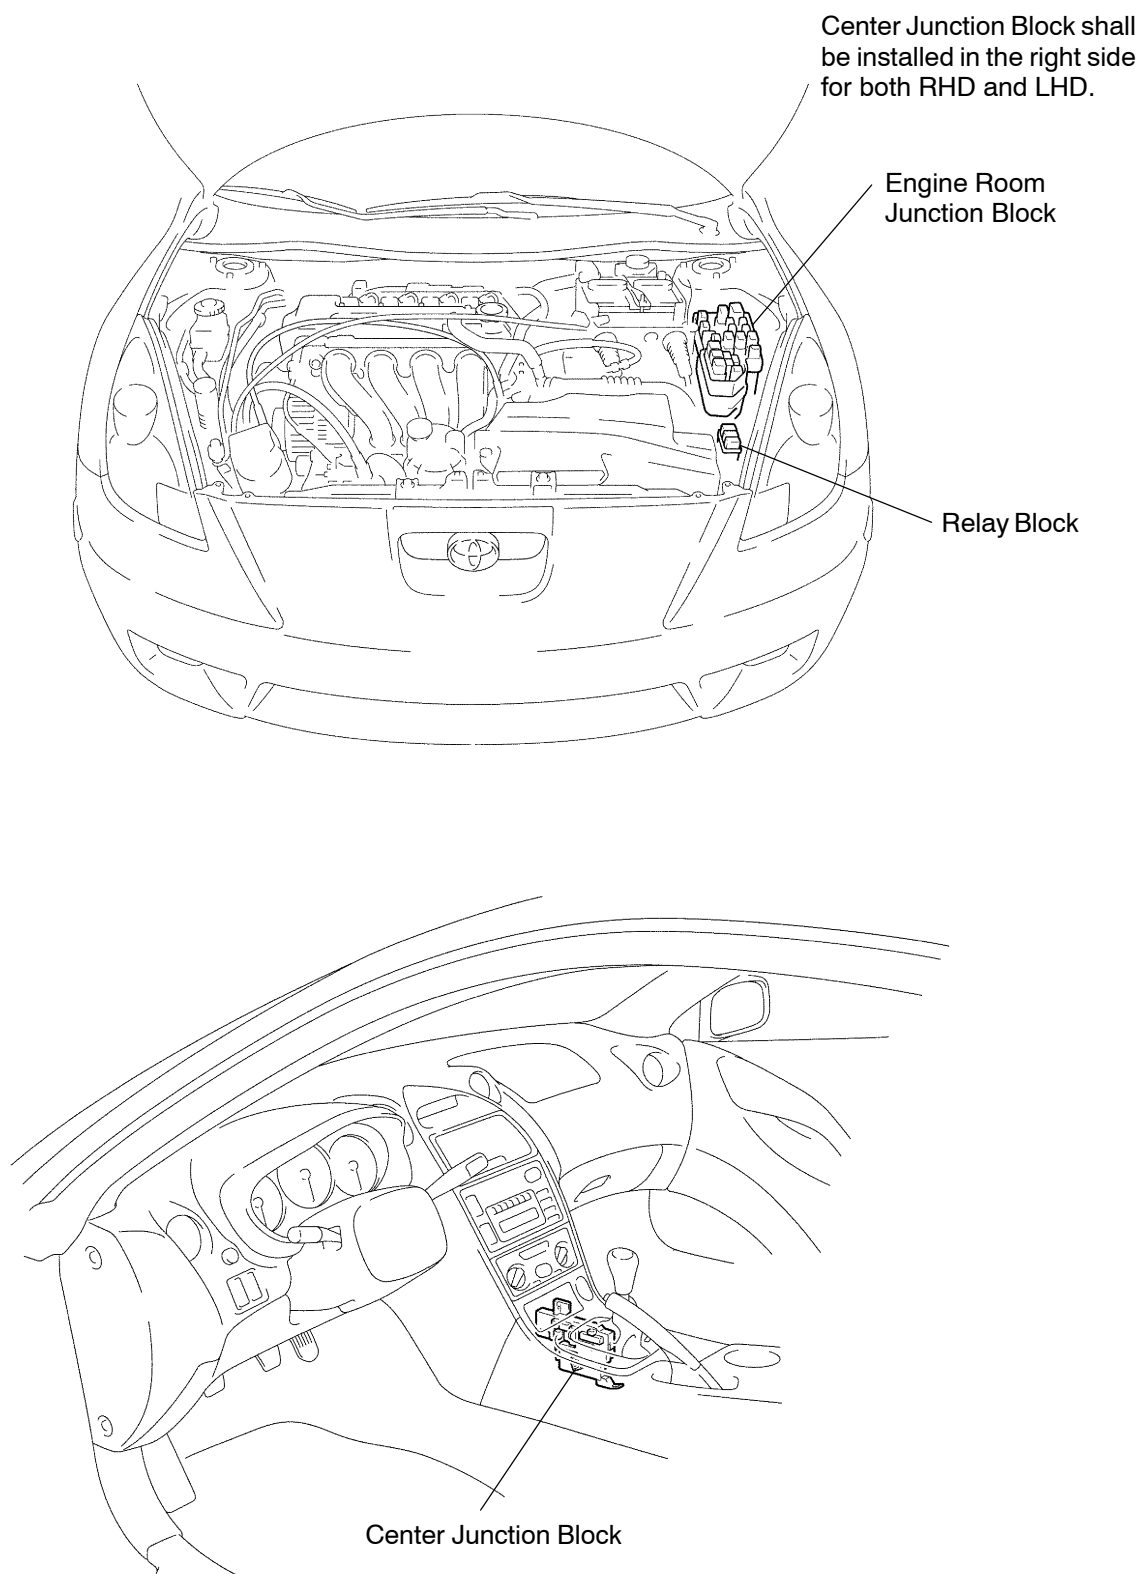


POWER SOURCE LOCATION

BE1CX-03

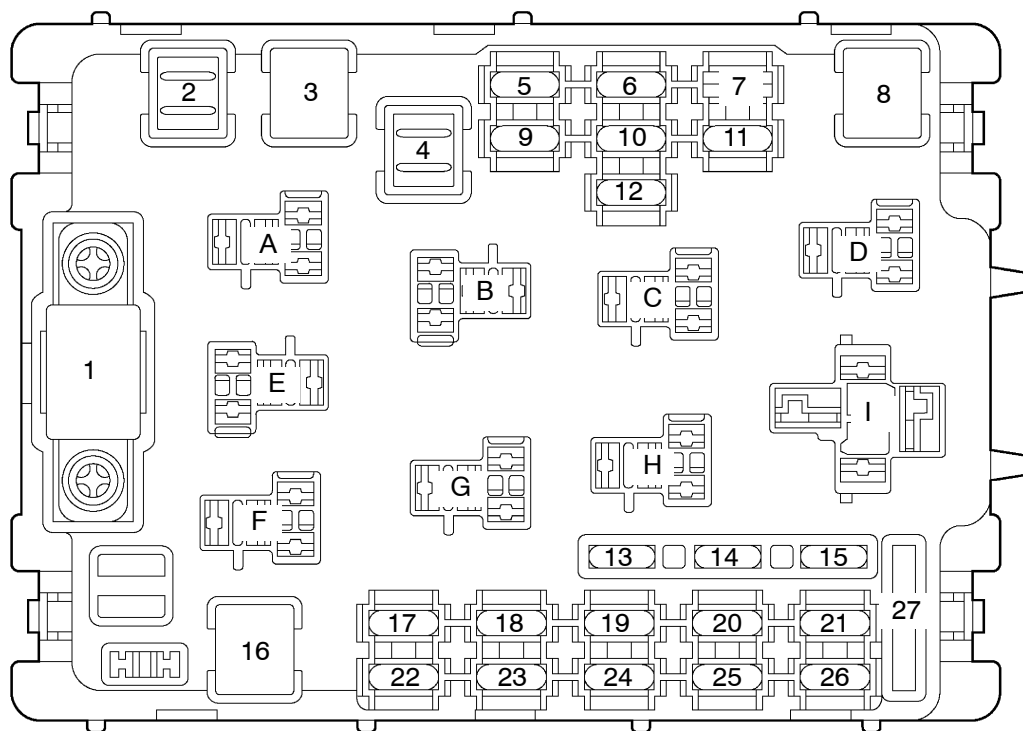


ENGINE ROOM JUNCTION BLOCK**FUSES**

1. FL ALT	120 A
2. CDS	30 A
3. ABS NO. 1	40 A
4. RDI	30 A
5. HEAD LH-LWR	10 A
6. HEAD RH-UPR	20 A
7. -	-
8. HTR	50 A
9. ABS NO. 2	25 A
10. HEAD LVL	7.5 A
11. HEAD LH-UPR	10 A
12. HEAD RH-LWR	10 A
13. SPARE	10 A
14. SPARE	15 A
15. SPARE	30 A
16. MAIN	40 A
17. IG2	15 A
18. ST	7.5 A
19. EFI NO. 2	7.5 A
20. EFI NO. 1	7.5 A
21. HORN	10 A
22. HAZ	15 A
23. AM2	7.5 A
24. EFI	15 A
25. DCC	25 A
26. ALT-S	7.5 A
27. SPARE	7.5 A

RELAYS

A. FAN NO. 2 Relay
B. FAN NO. 1 Relay
C. Circuit Opening Relay
D. Horn Relay
E. FAN NO. 3 Relay
F. Magnetic Clutch Relay
G. IG2 Relay
H. EFI Relay
I. Headlight Control Relay

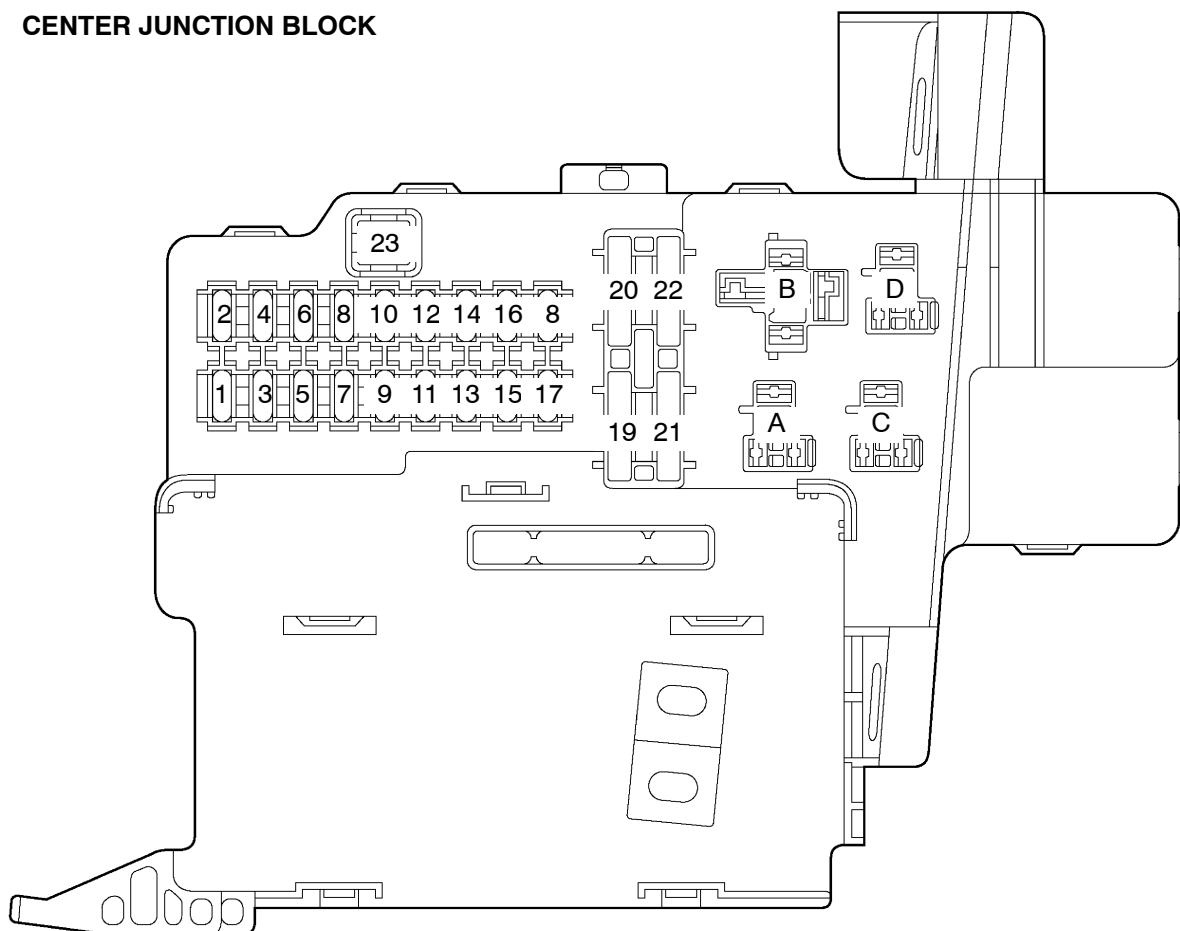CENTER JUNCTION BLOCK**FUSES**

1. CIG	15 A
2. S/ROOF	15 A
3. AM1	25 A
4. FL P/W	20 A
5. DOOR	20 A
6. STOP	10 A
7. FR FOG	15 A
8. SRS-IG	7.5 A
9. OBD	7.5 A
10. WASHER	15 A
11. WIPER	20 A
12. RADID	15 A
13. RR WIPER	10 A
14. TURN	7.5 A
15. -	-
16. HTR	10 A
17. FR R/W	20 A
18. TAIL	10 A
19. MULTI-FUSE	5 A (ABS-IG, WARNING, FAN RLY, ECU-IG)
20. MULTI-FUSE	7.5 A (DOME, MPX-B, ECU-B, RR FOG)
21. MULTI-FUSE	5 A (BODY ECU-IG, BK/UP LP, TENS RDC, DEF RLY)
22. MULTI-FUSE	7.5 A (ECU ACC, PANEL2, PANEL1)
23. DEF	30 A

RELAYS

- A. Mirror Heater Relay (Europe)
- B. IG1 Relay
- C. Defogger Relay
- D. Taillight Control Relay