

IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH LOCATION

BE00P-04

Center Junction Block shall be installed in the right side for both RHD and LHD.

