


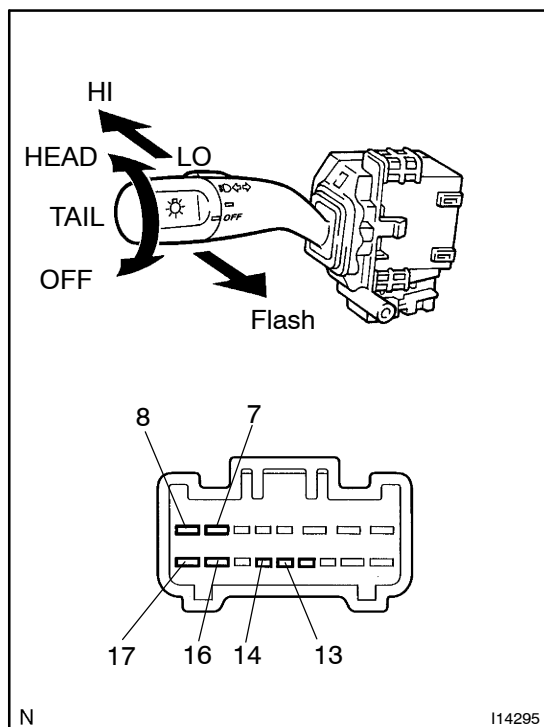

INSPECTION

1. Except Australia models:

INSPECT LIGHT CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
TAIL	14 - 16	Continuity
HEAD	13 - 14 - 16	Continuity


If continuity is not as specified, replace the switch.

2. Except Australia models:

INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Low beam	16 - 17	Continuity
High beam	7 - 16	Continuity
Flash	7 - 8 - 16	Continuity

If continuity is not as specified, replace the switch.

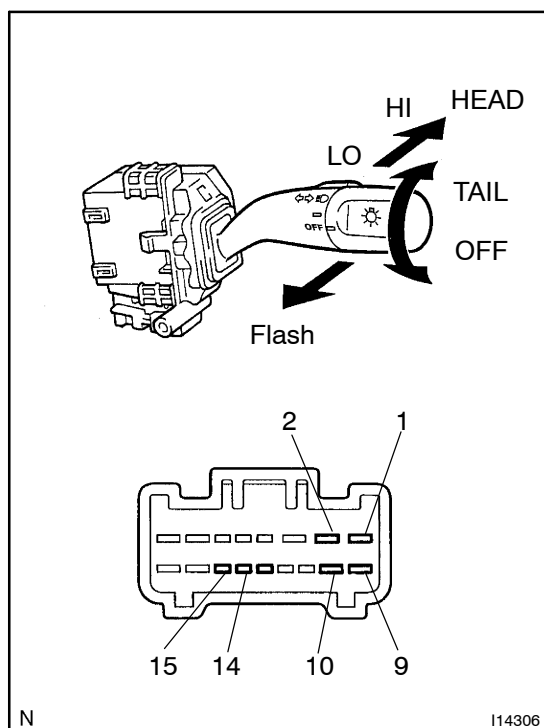

3. Australia models:

INSPECT LIGHT CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
TAIL	9 - 15	Continuity
HEAD	9 - 14 - 15	Continuity


If continuity is not as specified, replace the switch.

4. Australia models:

INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Low beam	9 - 10	Continuity
High beam	2 - 9	Continuity
Flash	1 - 2 - 9	Continuity


If continuity is not as specified, replace the switch.

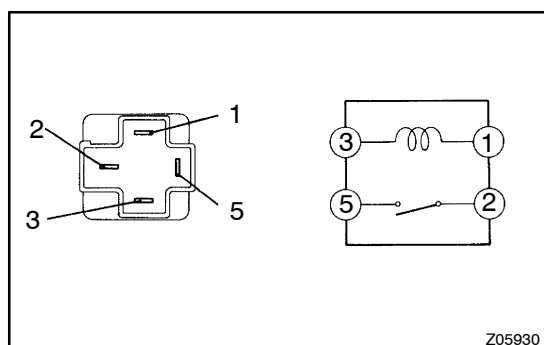

5. INSPECT HEADLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 3	Continuity
Apply B+ between terminals 1 and 2.	2 - 5	Continuity

If continuity is not as specified, replace the relay.

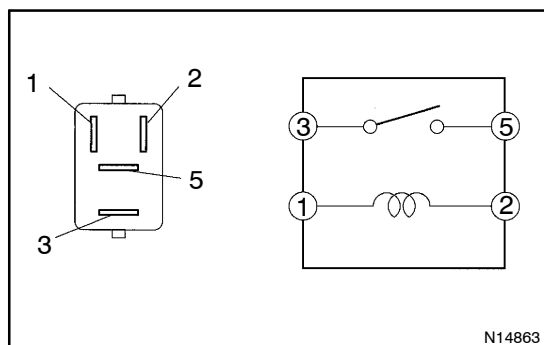**6. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.