


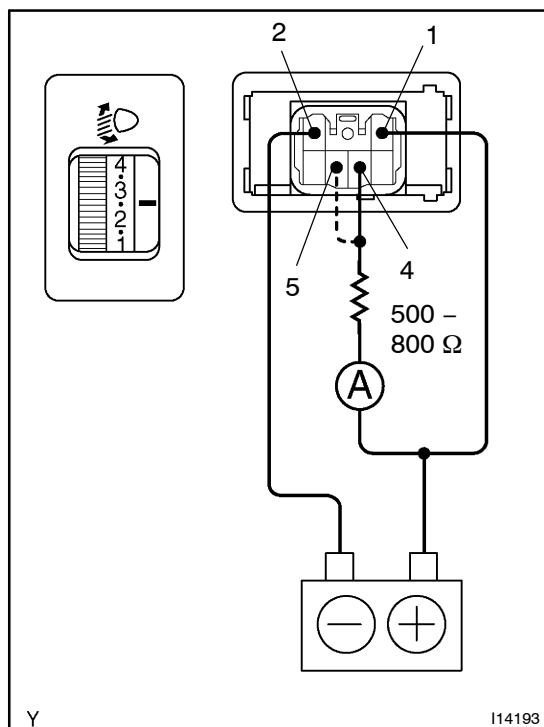

INSPECTION

1. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH CURRENT


NOTICE:

If a resistor is not placed, switch may be damaged.

Measure the current between terminal 4 or 5.

Switch position	Current (mA)
0	Approx. 8.0
1	Approx. 7.2
2	Approx. 6.4
3	Approx. 5.6
4	Approx. 4.8
5	Approx. 4.0


If current value is not as specified, replace the switch.

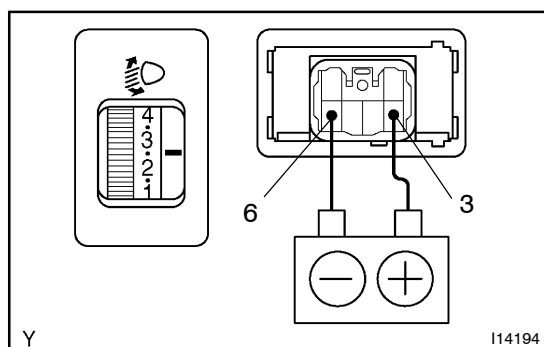

2. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH ILLUMINATION

Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 6, and check that the illumination light light up.

If operation is not as specified, replace the switch.

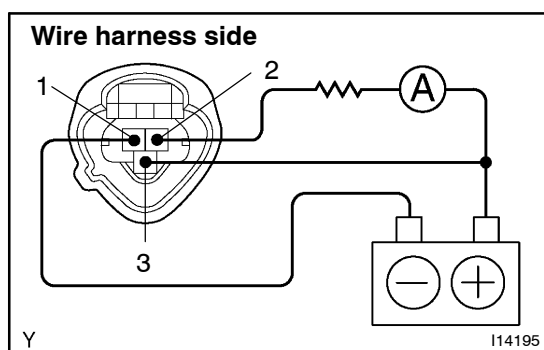

3. INSPECT HEADLIGHT BEAM LEVEL CONTROL ACTUATOR OPERATION

NOTICE:

If a resistor is not placed, switch may be damaged.

Disconnect connector and inspect connector on wire harness as shown in the chart.

Switch position	Current (mA)
0	Approx. 8.0
1	Approx. 7.2
2	Approx. 6.4
3	Approx. 5.6
4	Approx. 4.8
5	Approx. 4.0

If current value is not as specified, replace the actuator.