


INSPECTION

1. Except Australia models: INSPECT FRONT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	10 - 11	Continuity


If continuity is not as specified, replace the switch.

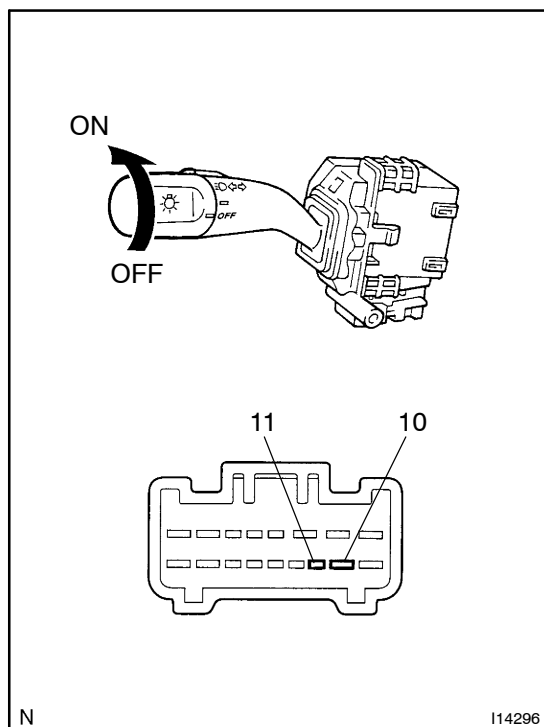

2. Australia models: INSPECT FRONT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	12 - 16	Continuity


If continuity is not as specified, replace the switch.

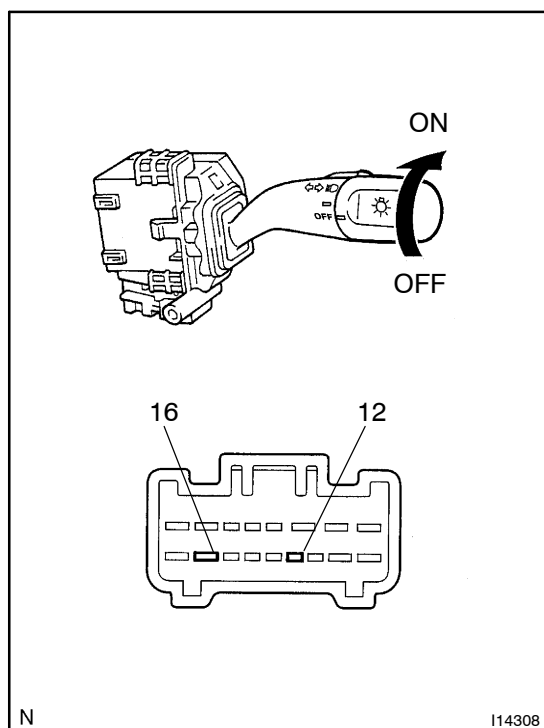


3. INSPECT REAR FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	2 - 5 - 6	Continuity
Illumination circuit	2 - 8	Continuity

If continuity is not as specified, replace the switch.

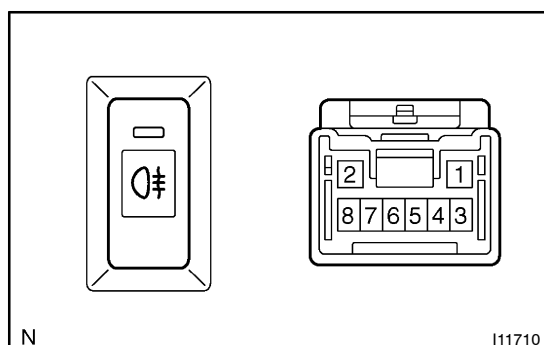

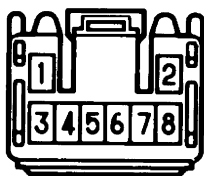Wire harness side:

h-8-1-B

I01673


4. INSPECT REAR FOG LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
1 - Ground	Constant	* Continuity
5 - Ground	Light control switch HEAD	Continuity
6 - Ground	Front fog light switch ON	Continuity
7 - Ground	Constant	Continuity
2 - Ground	Light control switch TAIL or HEAD	Battery voltage
3 - Ground	Constant	Battery voltage

*: There is resistance because this circuit is grounded through the bulb.

If circuit is not as specified, replace the wire harness.

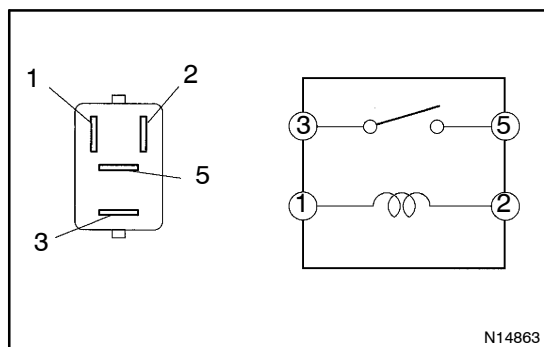


N14863

5. INSPECT FRONT FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

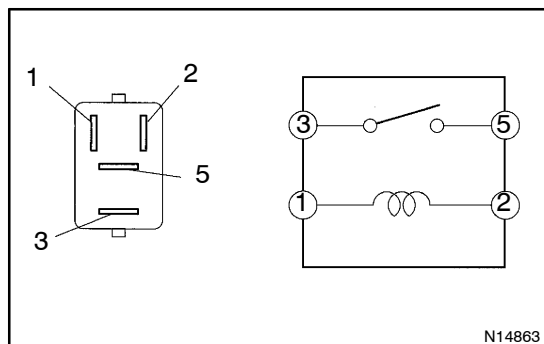

N14863

6. INSPECT REAR FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.