


INTERIOR LIGHT SYSTEM LOCATION

BEOP0-03

Center Junction Block shall be installed in the right side for both RHD and LHD.

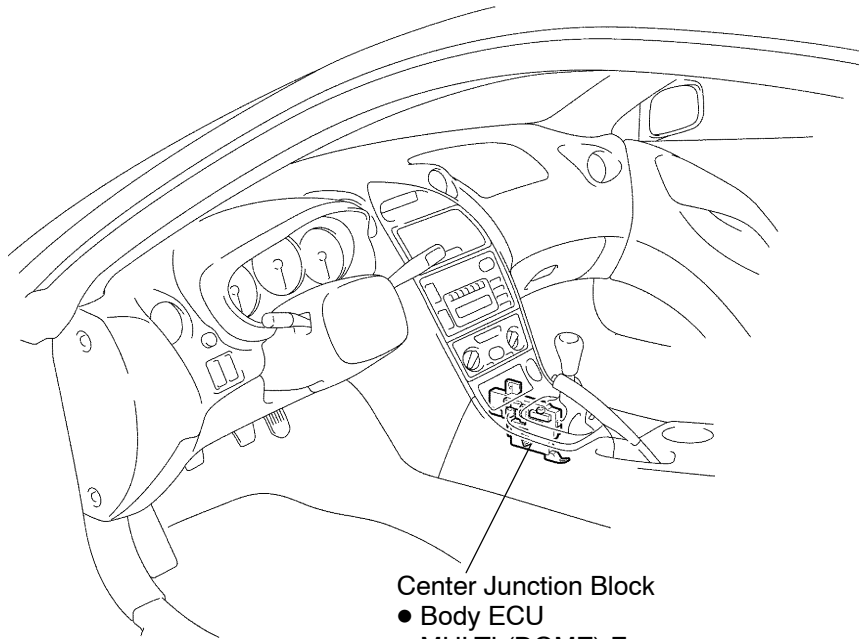


Front Personal Light

Door Courtesy Switch

Luggage Compartment Light

Door Courtesy Switch

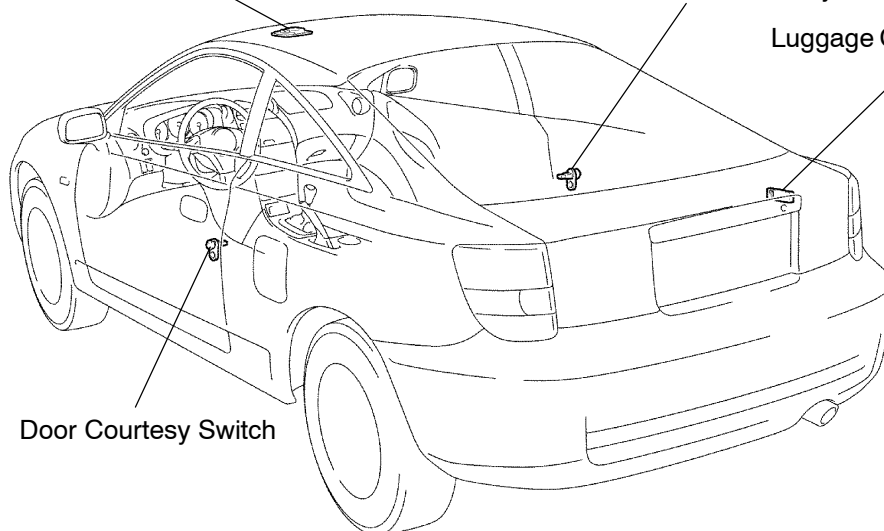

I13603