


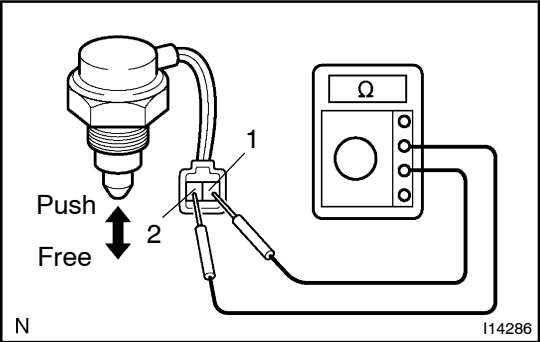

INSPECTION

1. INSPECT BACK-UP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Free	1 - 2	No continuity
Push	1 - 2	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT NEUTRAL START SWITCH CONTINUITY (See page DI-46)