


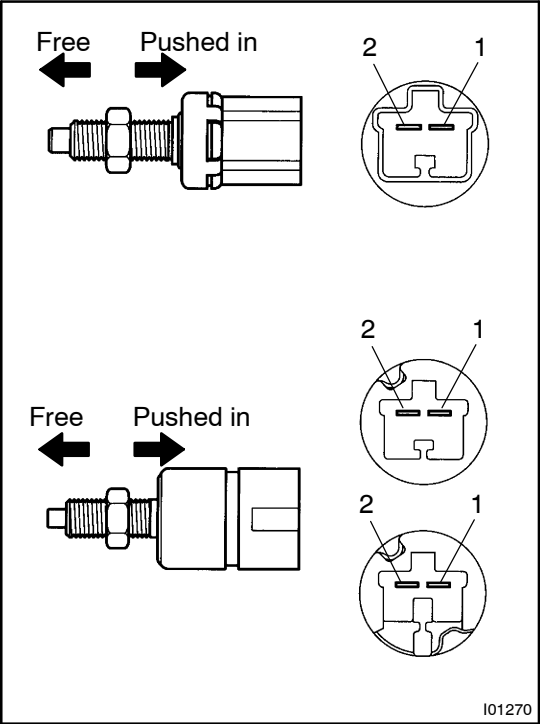


INSPECTION

INSPECT STOP LIGHT SWITCH CONTINUITY

w/o cruise control system:

Switch position	Tester connection	Specified condition
Switch pin pushed in (Pedal released)	-	No continuity
Switch pin free (Pedal depressed)	1 - 2	Continuity

If continuity is not as specified, replace the switch.

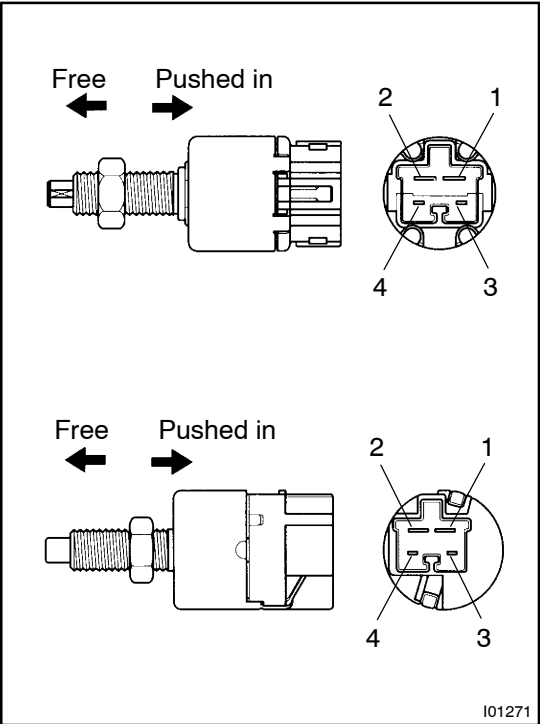

w/ cruise control system:

Switch position	Tester connection	Specified condition
Switch pin pushed in (Pedal released)	-	No continuity
Switch pin free (Pedal depressed)	1 - 2	Continuity

If continuity is not as specified, replace the switch.