


CIRCUIT

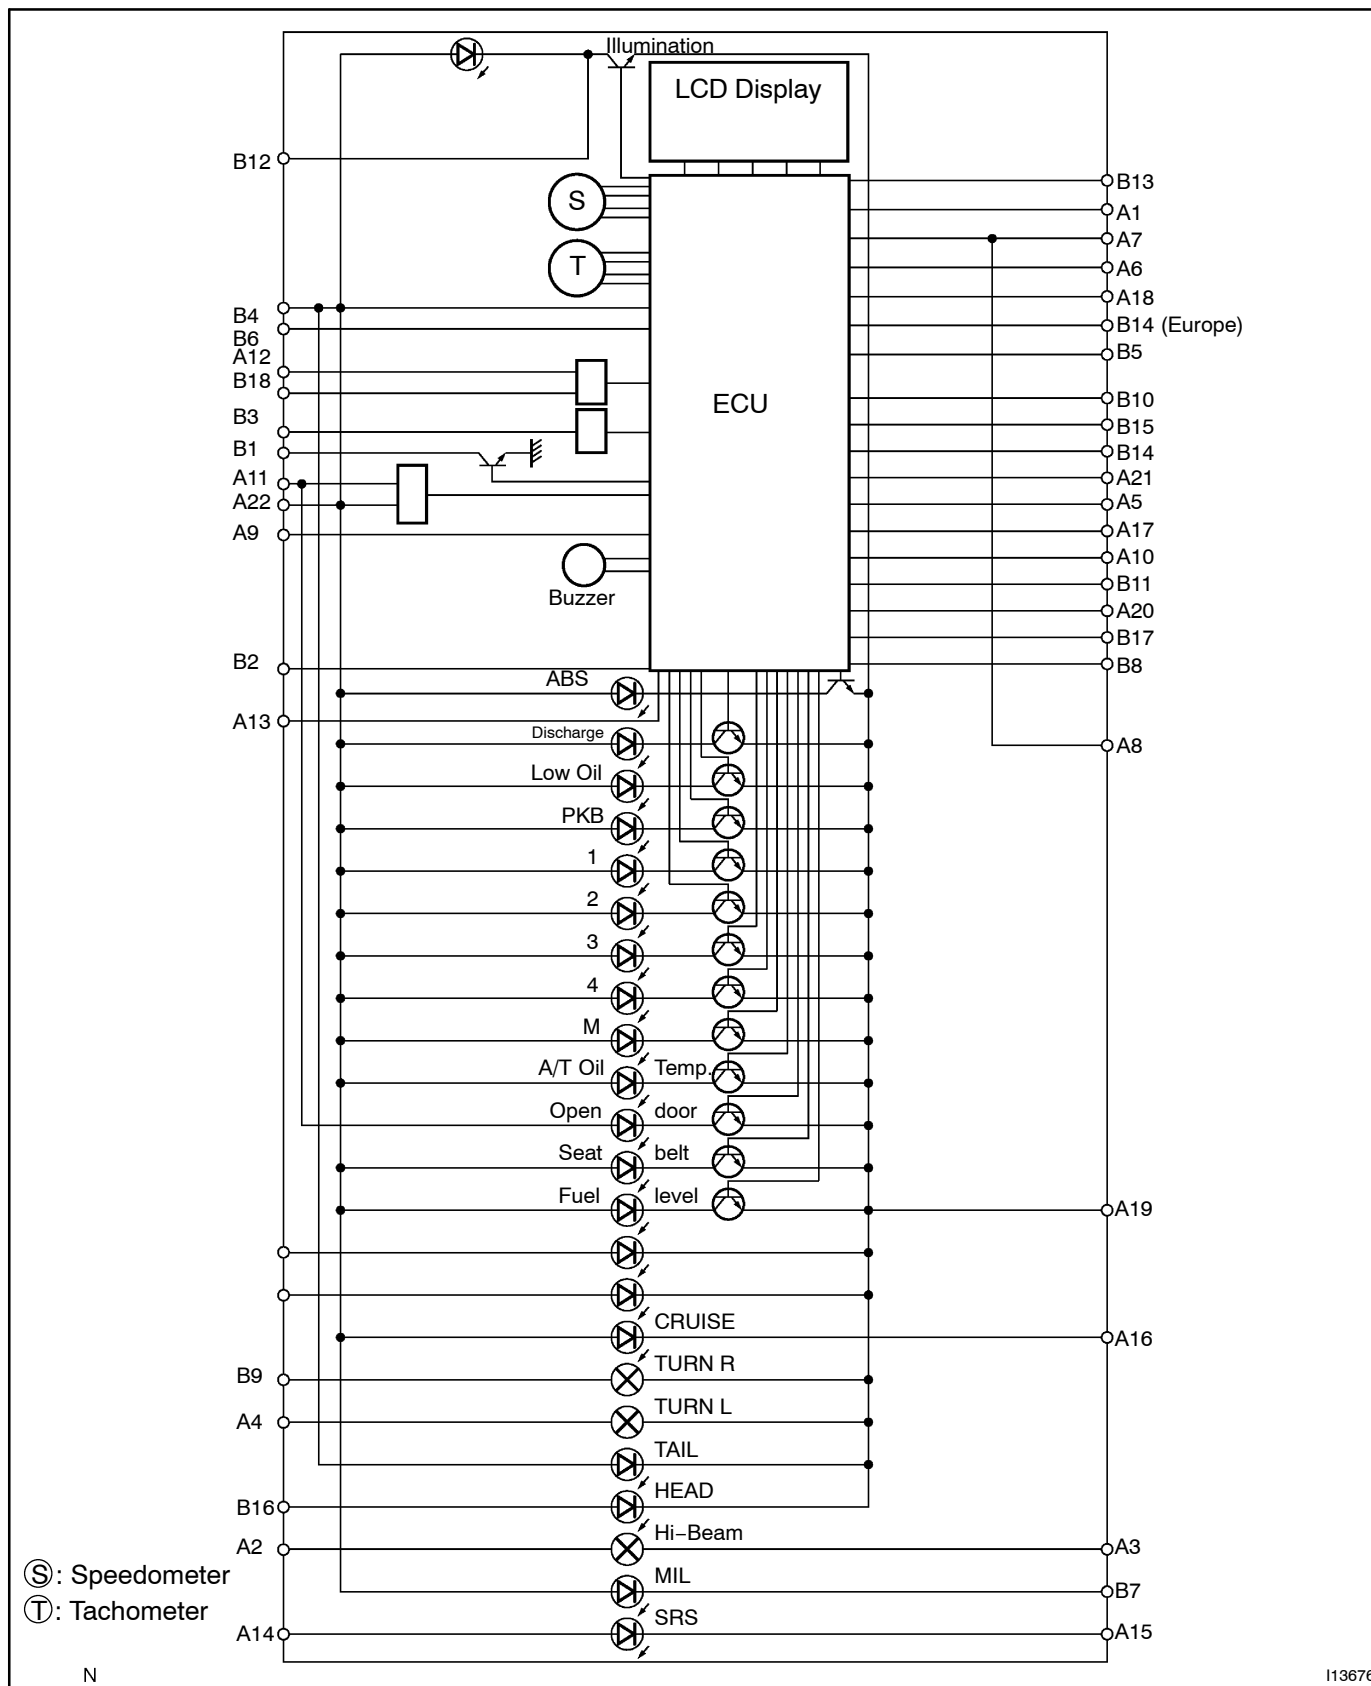

No.	Wiring connector side (Europe)	Wiring connector side (Australia)
A	1 Front fog light switch	Sport mode switch
	2 Headlight dimmer switch	Headlight dimmer switch
	3 Headlight	Headlight
	4 Turn signal switch (Left side)	Turn signal switch (Left side)
	5 Light control rheostat	Light control rheostat
	6 Evaporator temp. sensor	Evaporator temp. sensor
	7 Ground	Ground
	8 Ground	Ground
	9 Speed control unit	Speed control unit
	10 Ground	Ground
	11 ECU-B Fuse	ECU-B Fuse
	12 Engine and ECT ECU (MPX circuit)	Engine and ECT ECU (MPX circuit)
	13 Heater main relay	Heater main relay
	14 SRS Fuse	SRS Fuse
	15 Airbag sensor assembly	Airbag sensor assembly
	16 -	Cruise control ECU
	17 Light control rheostat	Light control rheostat
	18 Evaporator temp. sensor	Evaporator temp. sensor
	19 Ground	Ground
	20 Speed sensor (SI terminal)	Speed sensor (SI terminal)
	21 Back-up light switch	Back-up light switch
	22 WARNING Fuse	WARNING Fuse
B	1 Alternator	Alternator
	2 Clock (Passenger seat belt warning)	Clock (Passenger seat belt warning)
	3 Body ECU	Body ECU
	4 TAIL Fuse	TAIL Fuse
	5 A/C ECU	A/C ECU
	6 Engine and ECT ECU (Tacho signal)	Engine and ECT ECU (Tacho signal)
	7 Engine and ECT ECU	Engine and ECT ECU
	8 ABS ECU (Parking brake switch signal)	ABS ECU (Parking brake switch signal)
	9 Turn signal switch (Right side)	Turn signal switch (Right side)
	10 A/C control panel (A/C switch indicator)	A/C control panel (A/C switch indicator)
	11 -	ABS ECU
	12 -	-
	13 Rear fog light switch	O/D off switch
	14 A/C ECU (Water temp. signal)	-
	15 A/C switch (Manual A/C) A/C ECU (Auto A/C)	A/C switch (Manual A/C) A/C ECU (Auto A/C)
	16 -	-
	17 ABS ECU	ABS ECU
	18 Engine and ECT ECU (MPX circuit)	Engine and ECT ECU (MPX circuit)

MPX: Multiplex communication
Temp. : Temperature