

POWER WINDOW CONTROL SYSTEM


TROUBLESHOOTING

BE1EU-01


1 One touch power window does not move up and down.


After turning the ignition switch ON and power window switch UP or DOWN check that the master and regulator switch AUTO light blinks.

- Error is classified into the following 3 types according to the way of blinking.

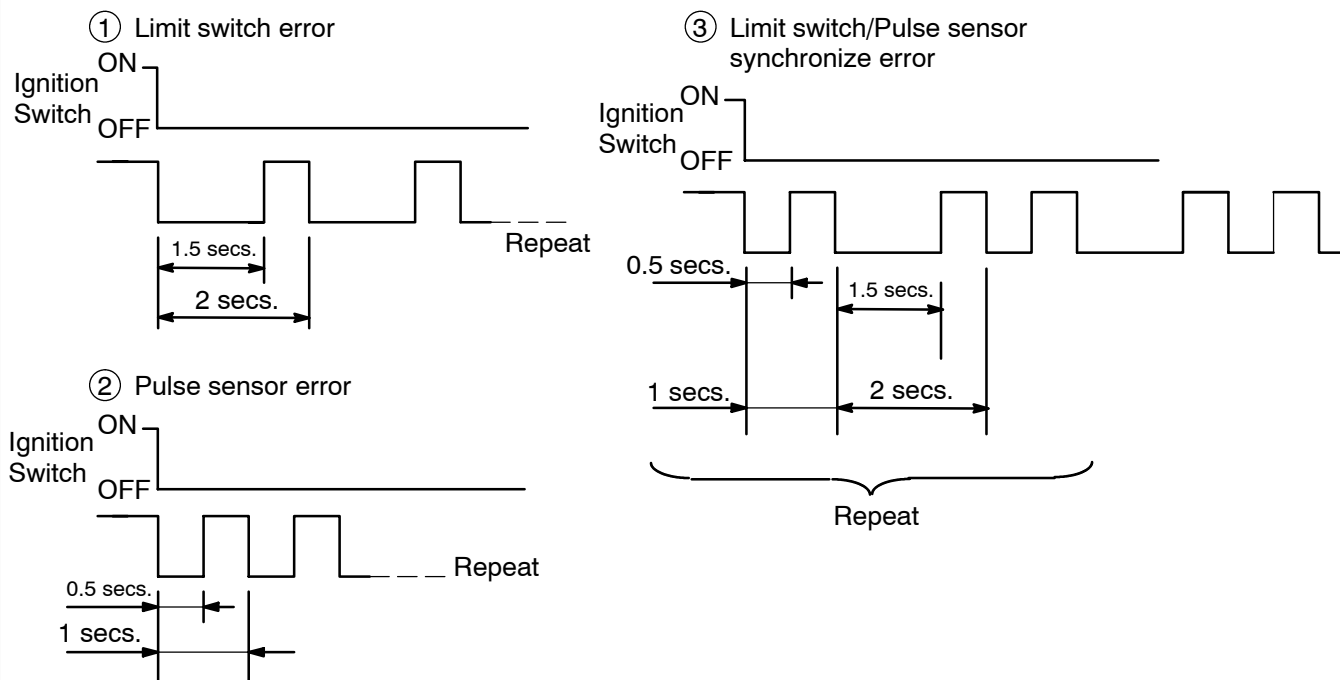


- < Reference >
- When the ignition switch is turned OFF after the AUTO light starts blinking, the blinking will stop 43 sec. later.
 - When the ignition switch is turned ON after that, the AUTO light will start blinking again.

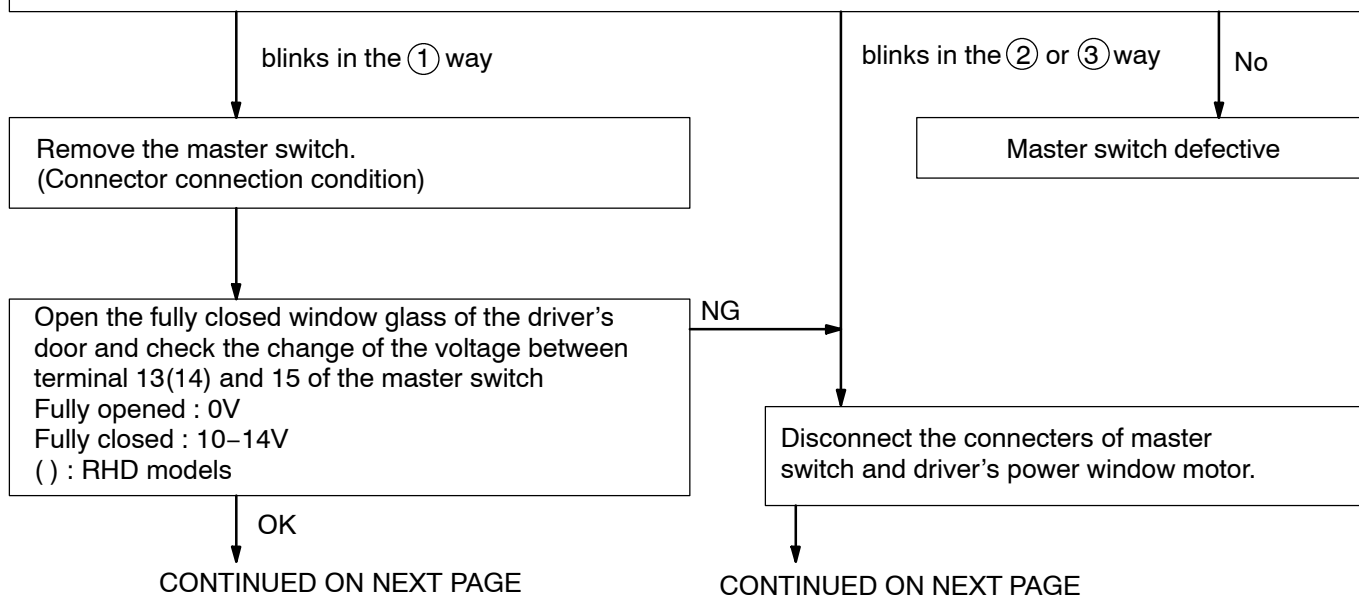


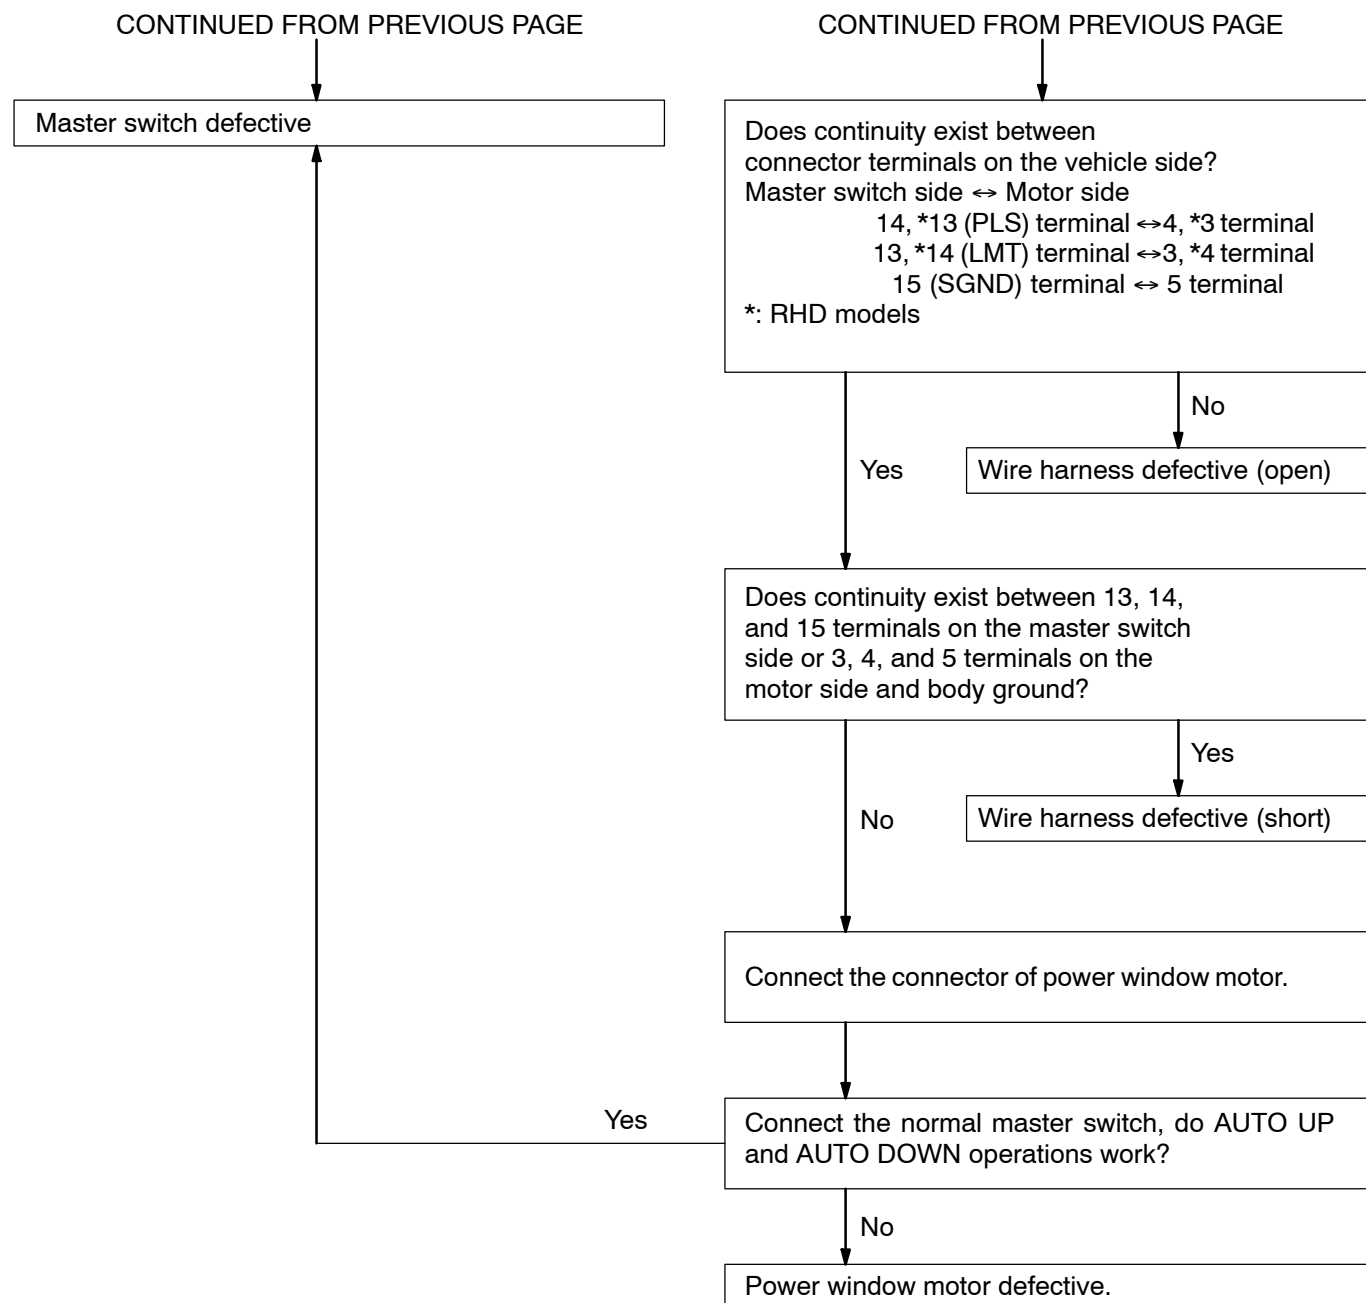

Power Window Master Switch

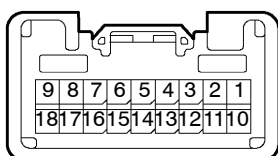

2 During AUTO UP operation, the power window moves down.

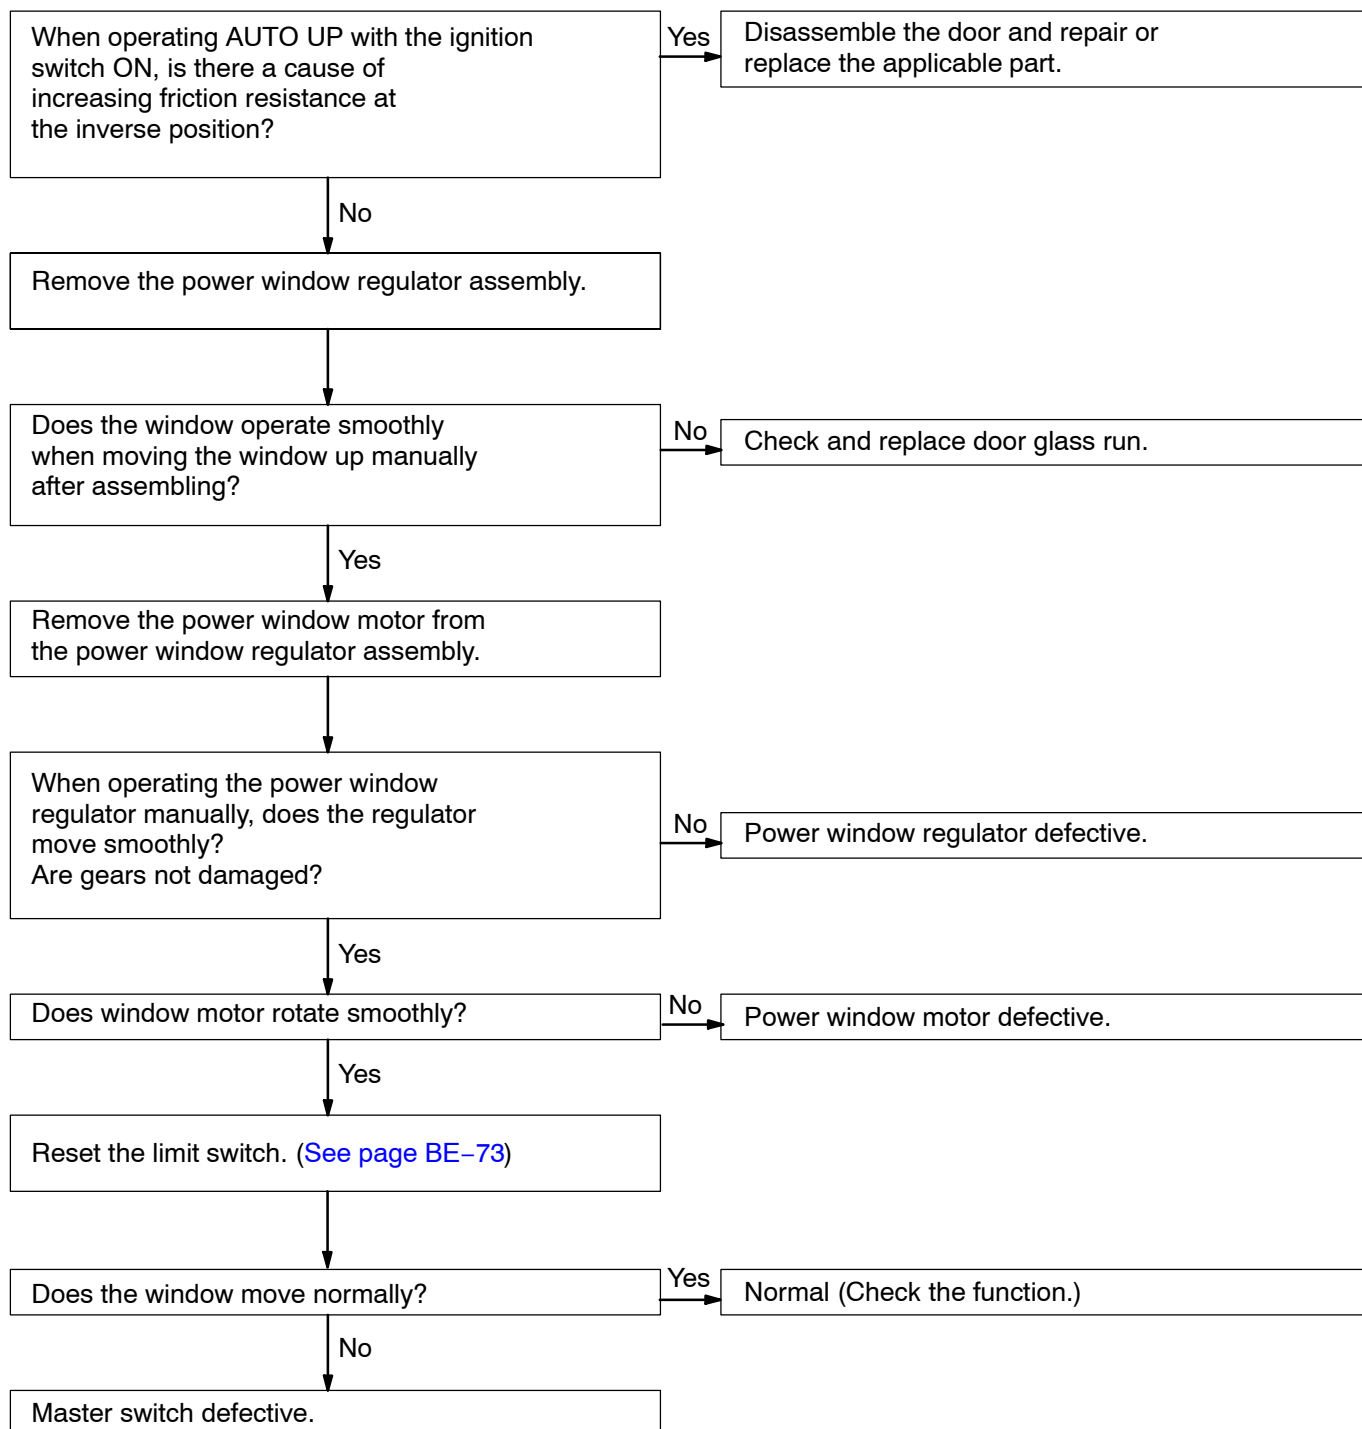

3 The DOWN function does not work though some other objects are caught in the power window glass.
