

ADJUSTMENT

HOW TO RESET POWER WINDOW MOTOR

- (a) Turn the ignition switch ON.
- (b) Fully close the door glass by manual operation.
- (c) Using a round bar (2 mm in diameter), keep pressing the reset switch.
- (d) With the reset switch pressed, fully open the door glass by manual operation.
- (e) Release the round bar from the reset switch and fully close the door glass by manual operation.
- (f) Check that the door glass can be fully opened and closed by AUTO operation.

HINT:

- Since jam protection system does not function immediately after resetting, repeat manual open/close operation several times before performing the AUTO operation.
 - When performing reverse operation after fully closing the window by AUTO UP, reset the motor again.
- (g) Check the power window function.

