

SLIDING ROOF SYSTEM

TROUBLESHOOTING

BE009-05

Sliding roof cannot be closed and neverses in error for some reason.

1. Operate the corresponding switch continuously for 10 sec, or more from the starting point of the reverse motion.
2. This shifts it to the manual operation in which the jam protection system is prohibited. (with the ignition ON)
3. In the manual operation, close the sliding roof completely and stop the motion.
4. The fully closed position will be detected by ECU.(Initialization).

