


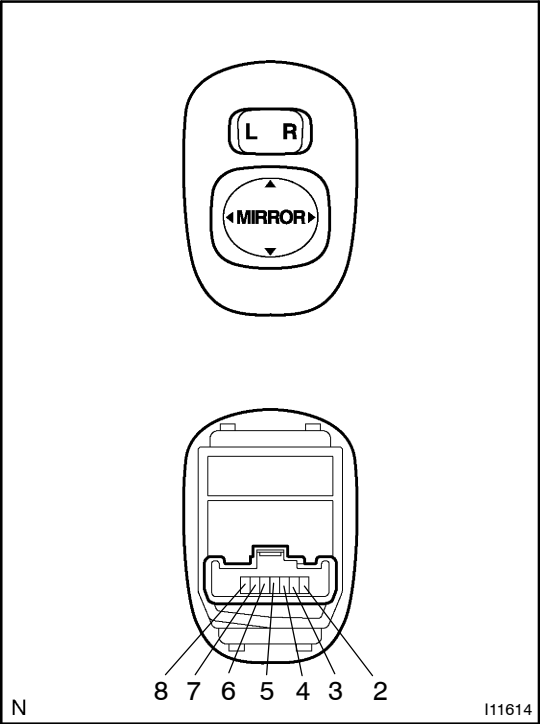

INSPECTION


1. INSPECT LEFT SIDE MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	4 - 8 6 - 7	Continuity
DOWN	4 - 7 6 - 8	Continuity
LEFT	5 - 8 6 - 7	Continuity
RIGHT	5 - 7 6 - 8	Continuity

2. INSPECT RIGHT SIDE MIRROR SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	3 - 8 6 - 7	Continuity
DOWN	3 - 7 6 - 8	Continuity
LEFT	2 - 8 6 - 7	Continuity
RIGHT	2 - 7 6 - 8	Continuity

If continuity is not as specified, replace the switch.
If continuity is as specified, inspect the switch circuit.

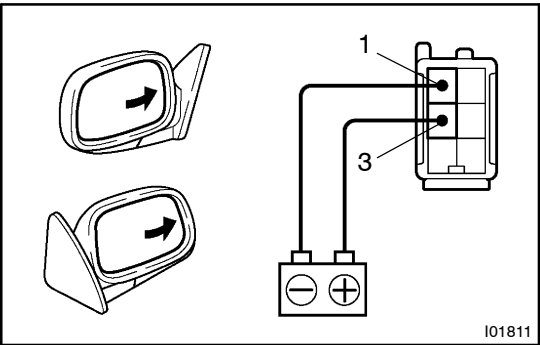


3. INSPECT MIRROR MOTOR OPERATION


- (a) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 1, and check that the mirror turns right side.

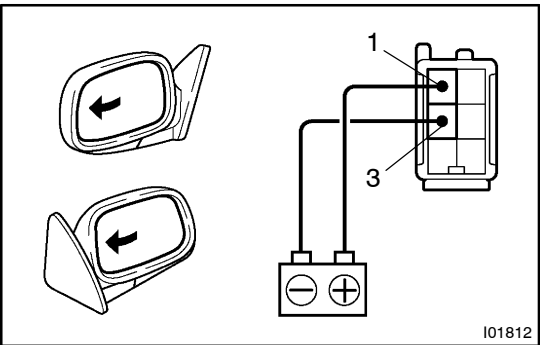

- (b) Reverse the polarity, and check that the mirror turns left side.

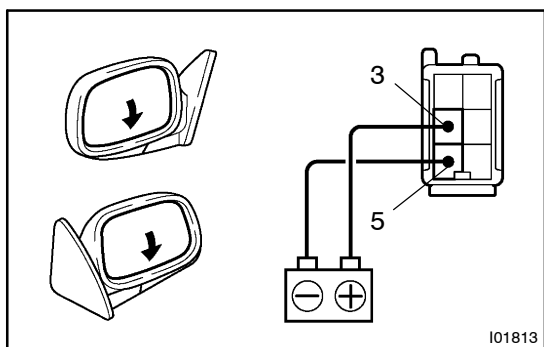

- (c) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 5, and check that the mirror turns to the downward.

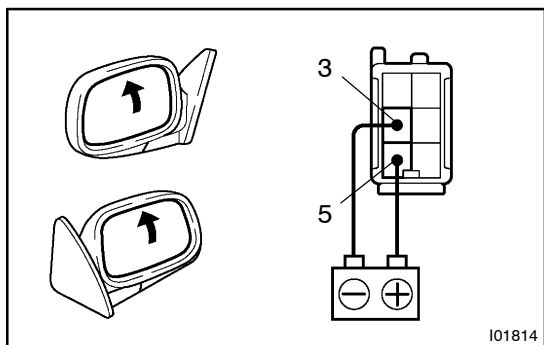

- (d) Reverse the polarity, and check that the mirror turns to the upward.
If operation is not as specified, replace the mirror assembly.